BRONCO


Bronco Models

Kit No.CB-35116

WWII German Sturmgeschütz III Ausf C/D

with 75mm L24 & 75mm L48（2in1）

二战德国三号突击炮C/D型（2in1）1/35 SCALE

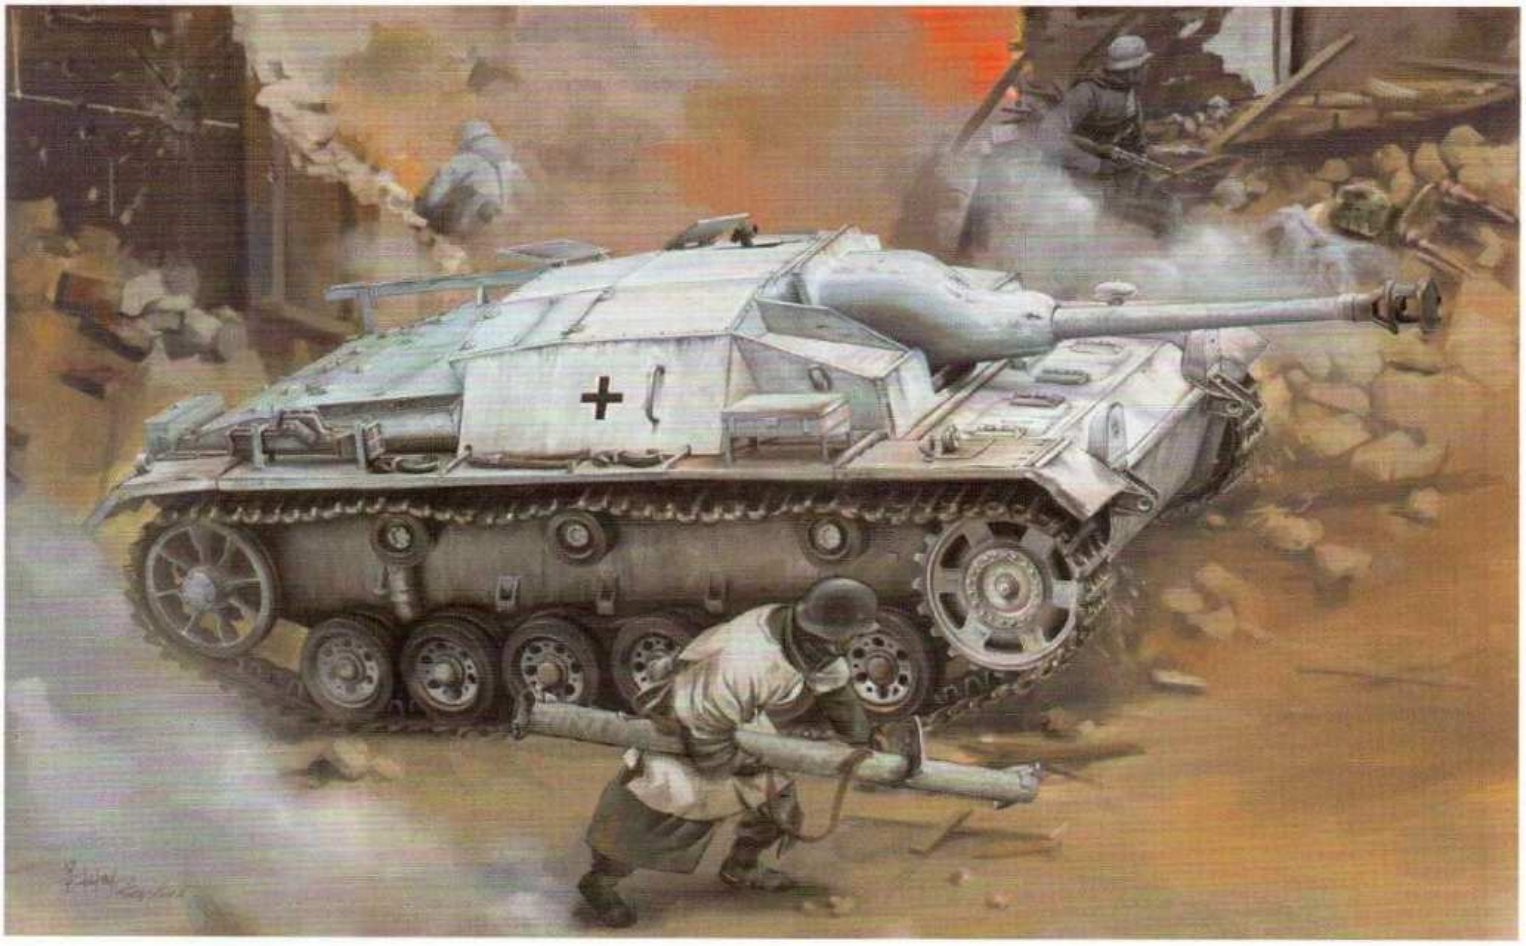

During World War II, Germany improved assault gun StuG III as infantry fire support, assault gun StuG III B on the basis of improved to Sturmgeschutz III Ausf C / D type. Late of the WWII, the German army in order to supplement the increasingly damaged tanks in the war, repair and modified a lot of StuG III to compensate for German Panzer Units.

Some Ausf C / D type used in order to improve it's defect of 75mmL24 short gun, reinstall the new guns to become interim non-standard models, one of which is equipped with a "Saukopf" mantlet artillery Sturmgeschutz III Ausf G last production of use Defensive shield of 75mmL48 long barrel, and participated in the famous battle of the Bluge and battle of Hungarian.

中文

第二次世界大战期间，德国改进了作为步兵火力支援的三号突击炮，在三号突击炮B型的基础上，改进生产了三号突击炮C/D型。大战末期，德国军队为了补充日益在战争中损毁的装甲武器，返修和改装了大量的三号突击炮，以弥补德军坦克部队坦克数量的不足。

其中一些C/D型为了改进其使用的75mm短炮的缺点，重新安装了新的火炮，成为临时非标准型的型号，其中之一便是安装有三号突击炮G型后期型使用的“猪头”火炮防盾的L48型长炮管型，并参加了著名的阿登森林突出部战役和匈牙利攻防战。

ILLUSTRATION 图示说明：

CORRECT METHOD FOR APPLYING DECALS :
正确使用水贴纸的方法:

1. Clean model parts surface with wet cloth.
   将需要贴上水贴之部位表面擦干净。
2. Cut out the decal parts and dip them in cold water for 15 ~20 seconds.
   将所需之贴纸剪下泡在清水里约15至20秒。
3. Place it on correct position of the model kit.
   将湿透之贴纸取出置放于正确之位置旁。
4. Slide off the decal from the base paper on to the model kit surface with a cotton stick.
   用棉花棒轻推贴纸表面使其从底纸滑出至模型表面之正确位置。
5. When decal get dry then complete.
   待其自然干透后即完成。

ICON INSTUCTION: 图标说明：


Open Hole
钻孔


Remove
切除



Make 2 pics
同样的制作二组


Bend
曲折


Optional
可以选择采用


Apply Decal
贴上水贴纸


Instant Glue For Metal
瞬间接着剂,金属用


Fill Hole
把孔填平


Do not cement
不用粘合

COLOR SUGGESTION: 涂装指引:

Color 涂料表		Hobby Color	MR. Hobby	Humbrol	Tamiya
German Gray	德国灰	H-32	C-40	92	XF-63
Tyre Black	轮胎黑	H-77	C-137	85	XF-1
Steel	黑铁色	H-18	C-28	53	/
Flat Black	消光黑	H-12	C-33	33	XF-1
Wood Brown	木棕色	H-37	C-43	/	/
Brunt Iron	烧铁色	H-76	C-61	/	/
Sand	沙黄色	H-78	C-38	66	XF-62
Flat White Matt Weiße	消光白色	H-11	C-62	34	XF-2

READ BEFORE ASSEMBLING: 组装必读:

- Carefully Study instruction before assembling. 组装前请阅读清楚制作指引。
- Keep plastic model glue and tools away from children. 胶水,油漆及工具勿让小孩接触。
- Do not use cement or paint near open flame or sparks. 胶水及油漆勿接触火种。
- Do not work in closed room. 勿在密封地方制作模型。

Printed in China

威骏模型 Copyright©2016 'All right reserved by Bronco Models

PARTS LIST 零件指示表：

BRONCO

Bronco Models

Copyright ©2016

Made in China


中国制造

No use parts
不要部件


Metal barrel

Copper wire ×2
铜丝


Ⓐ×1

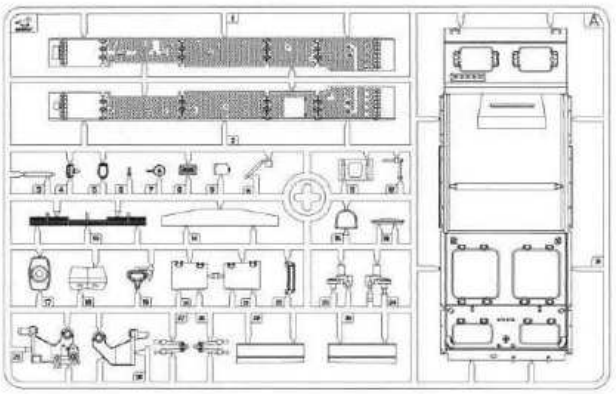


Ⓑ×1

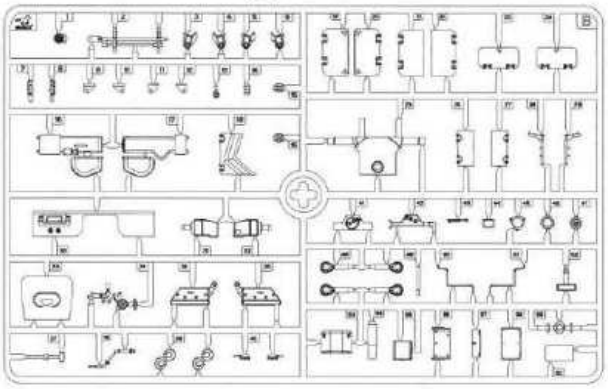


Ⓓd×1

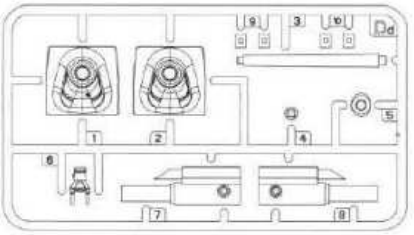


Ⓚa×4

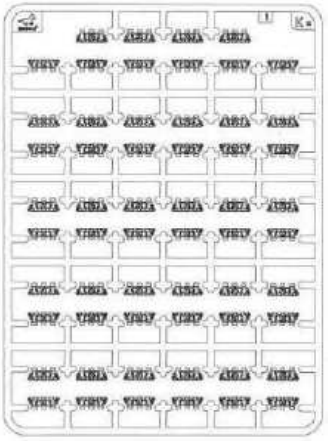

Ⓝ×1




Ⓒa×2

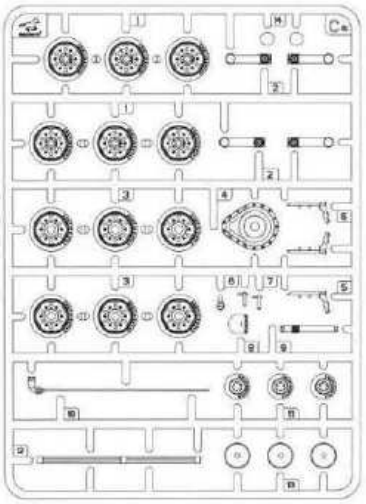


Ⓒe×1




Ⓛ×1

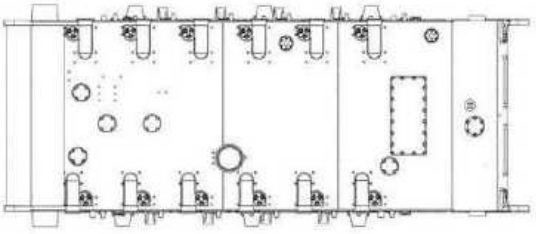


Ⓚb×4

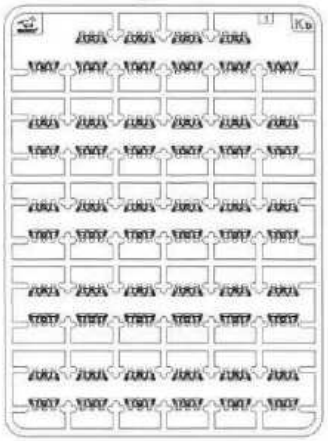


Ⓕ×1




Ⓒb×2

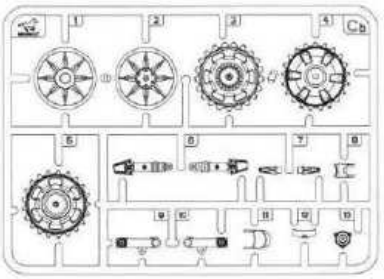


Ⓓa×1




Ⓜ×1

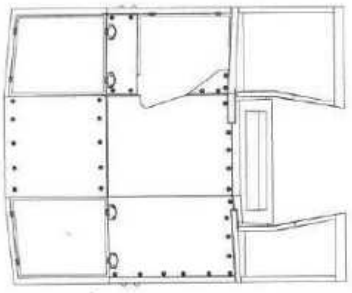


Ⓓc×1

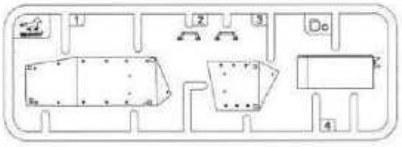


Ⓟ A×1

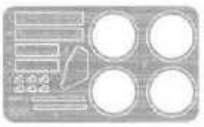


Ⓚa×1

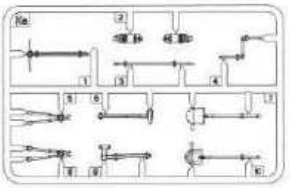

Ⓓb×1

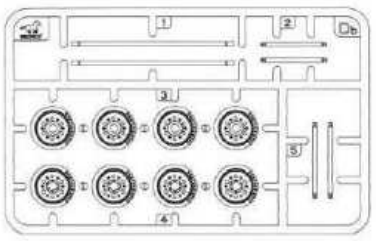

DECAL ×1

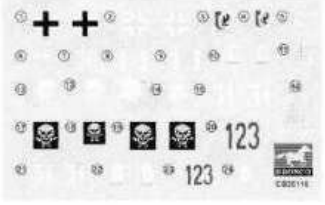

Ⓟ B×1




CB35116

威龙模型 Copyright©2016 *All right reserved by Bronco Models

1


Caution:
This kit contents a lot of small accurate parts, please carefully to read before to assembly.
此套件包含不少精细零件，请在制作前先翻阅说明书了解清楚。

轮子组装 Wheels Assembly

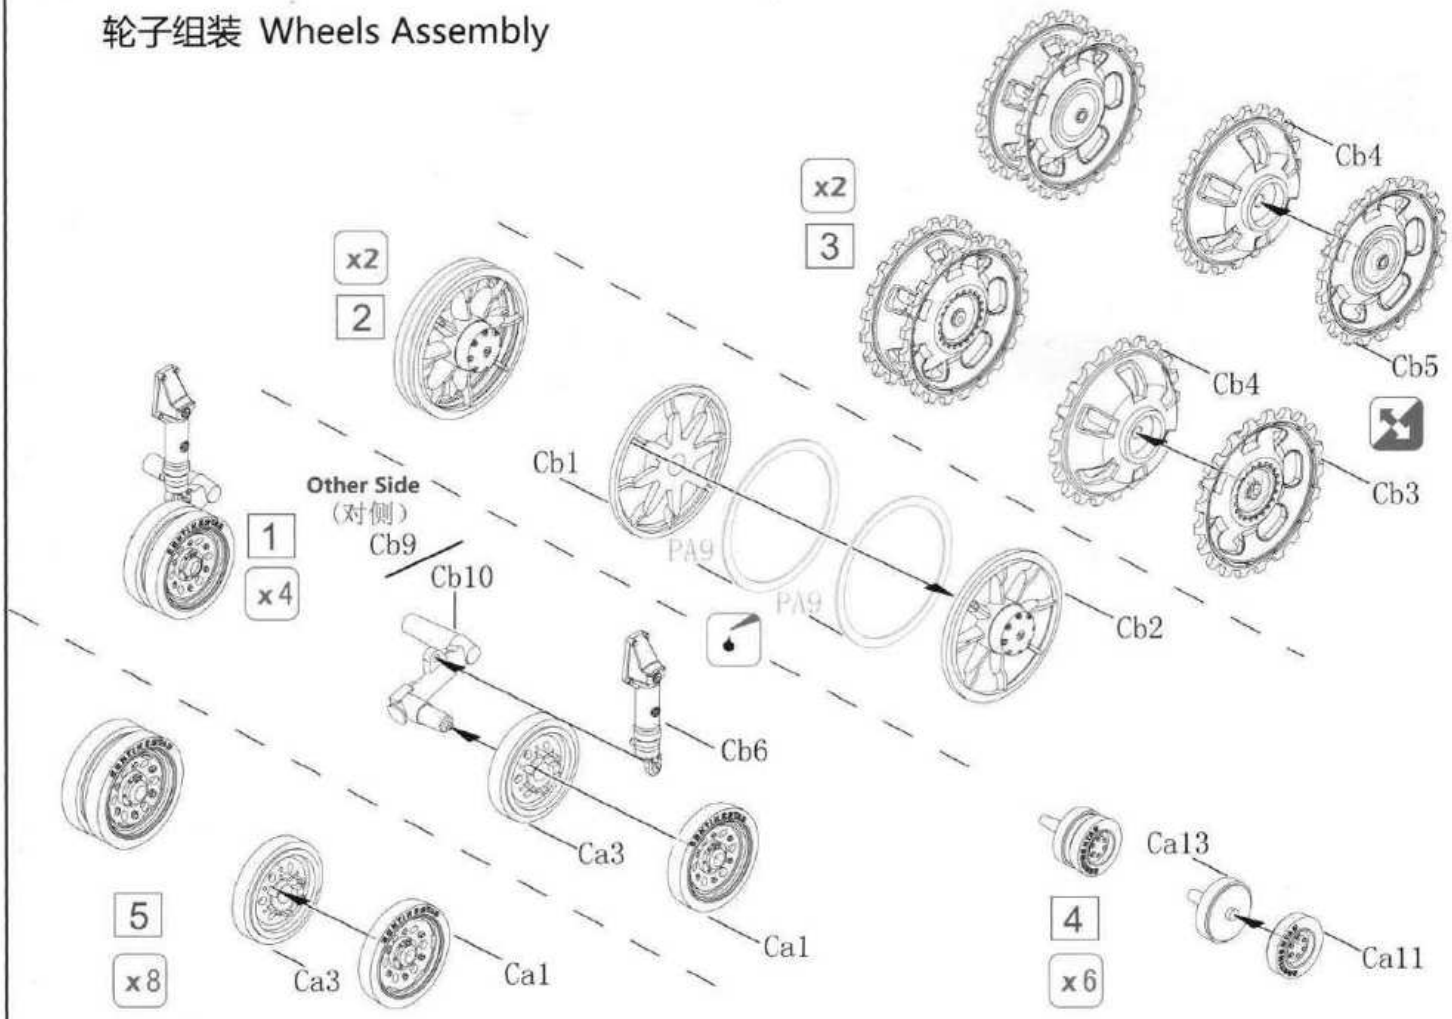


2


Hull & Suspension Arms Assembly
底盘组装

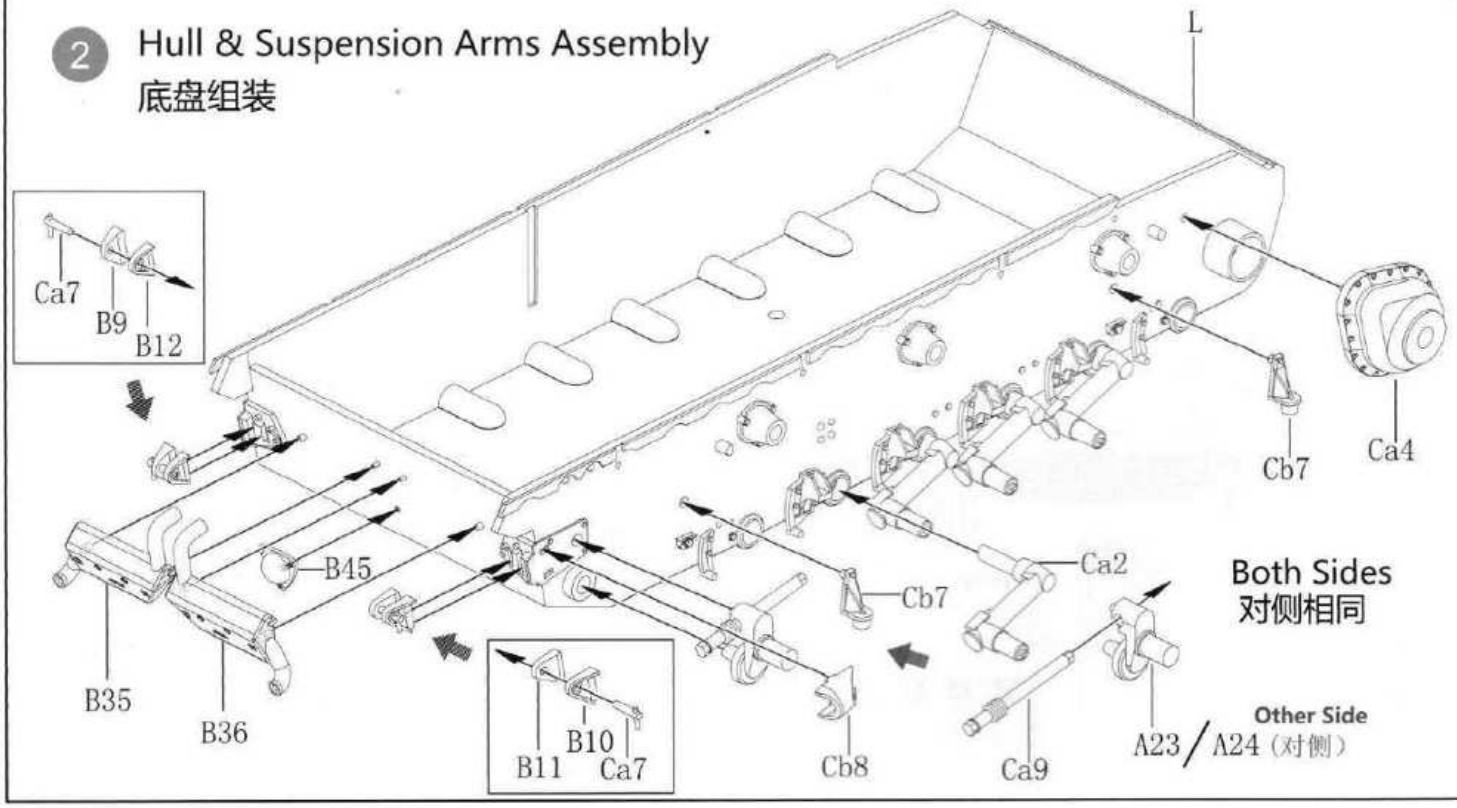

威骏模型 Copyright©2016 *All right reserved by Bronco Models

ILLUSTRATION 图示说明：

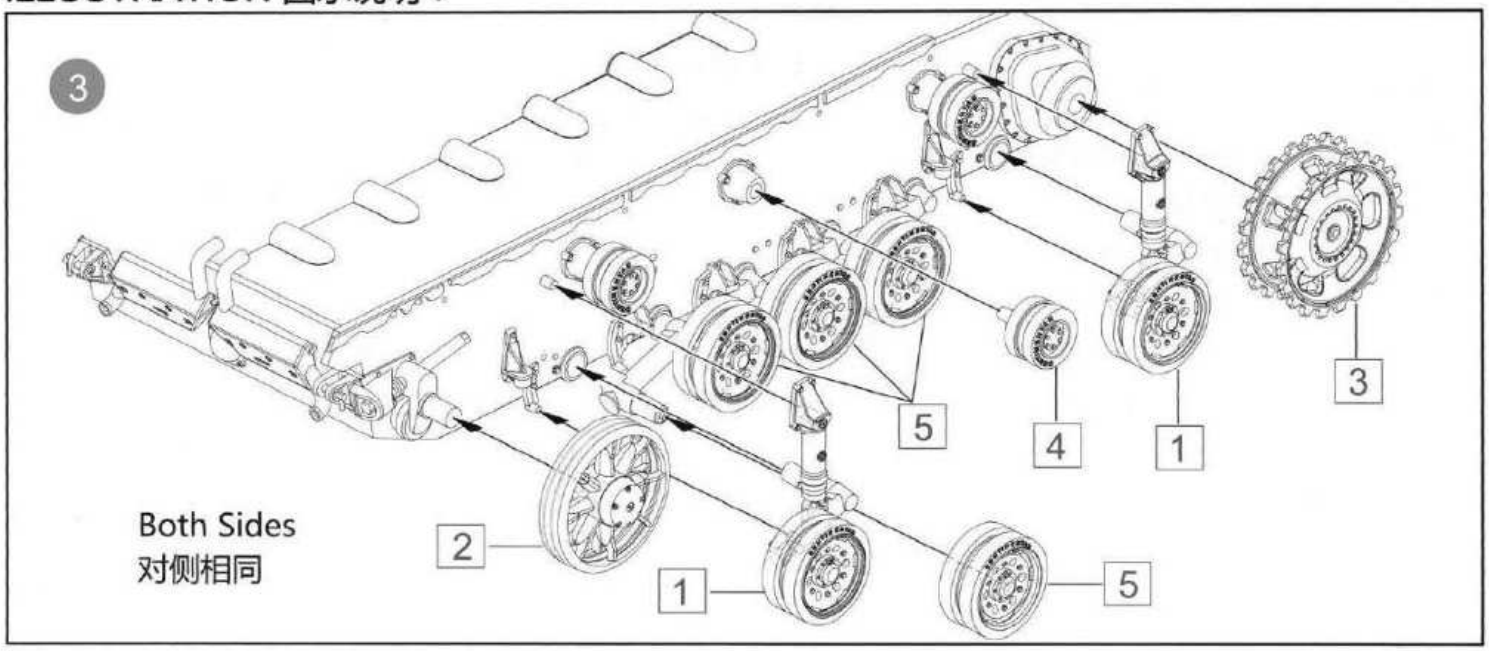

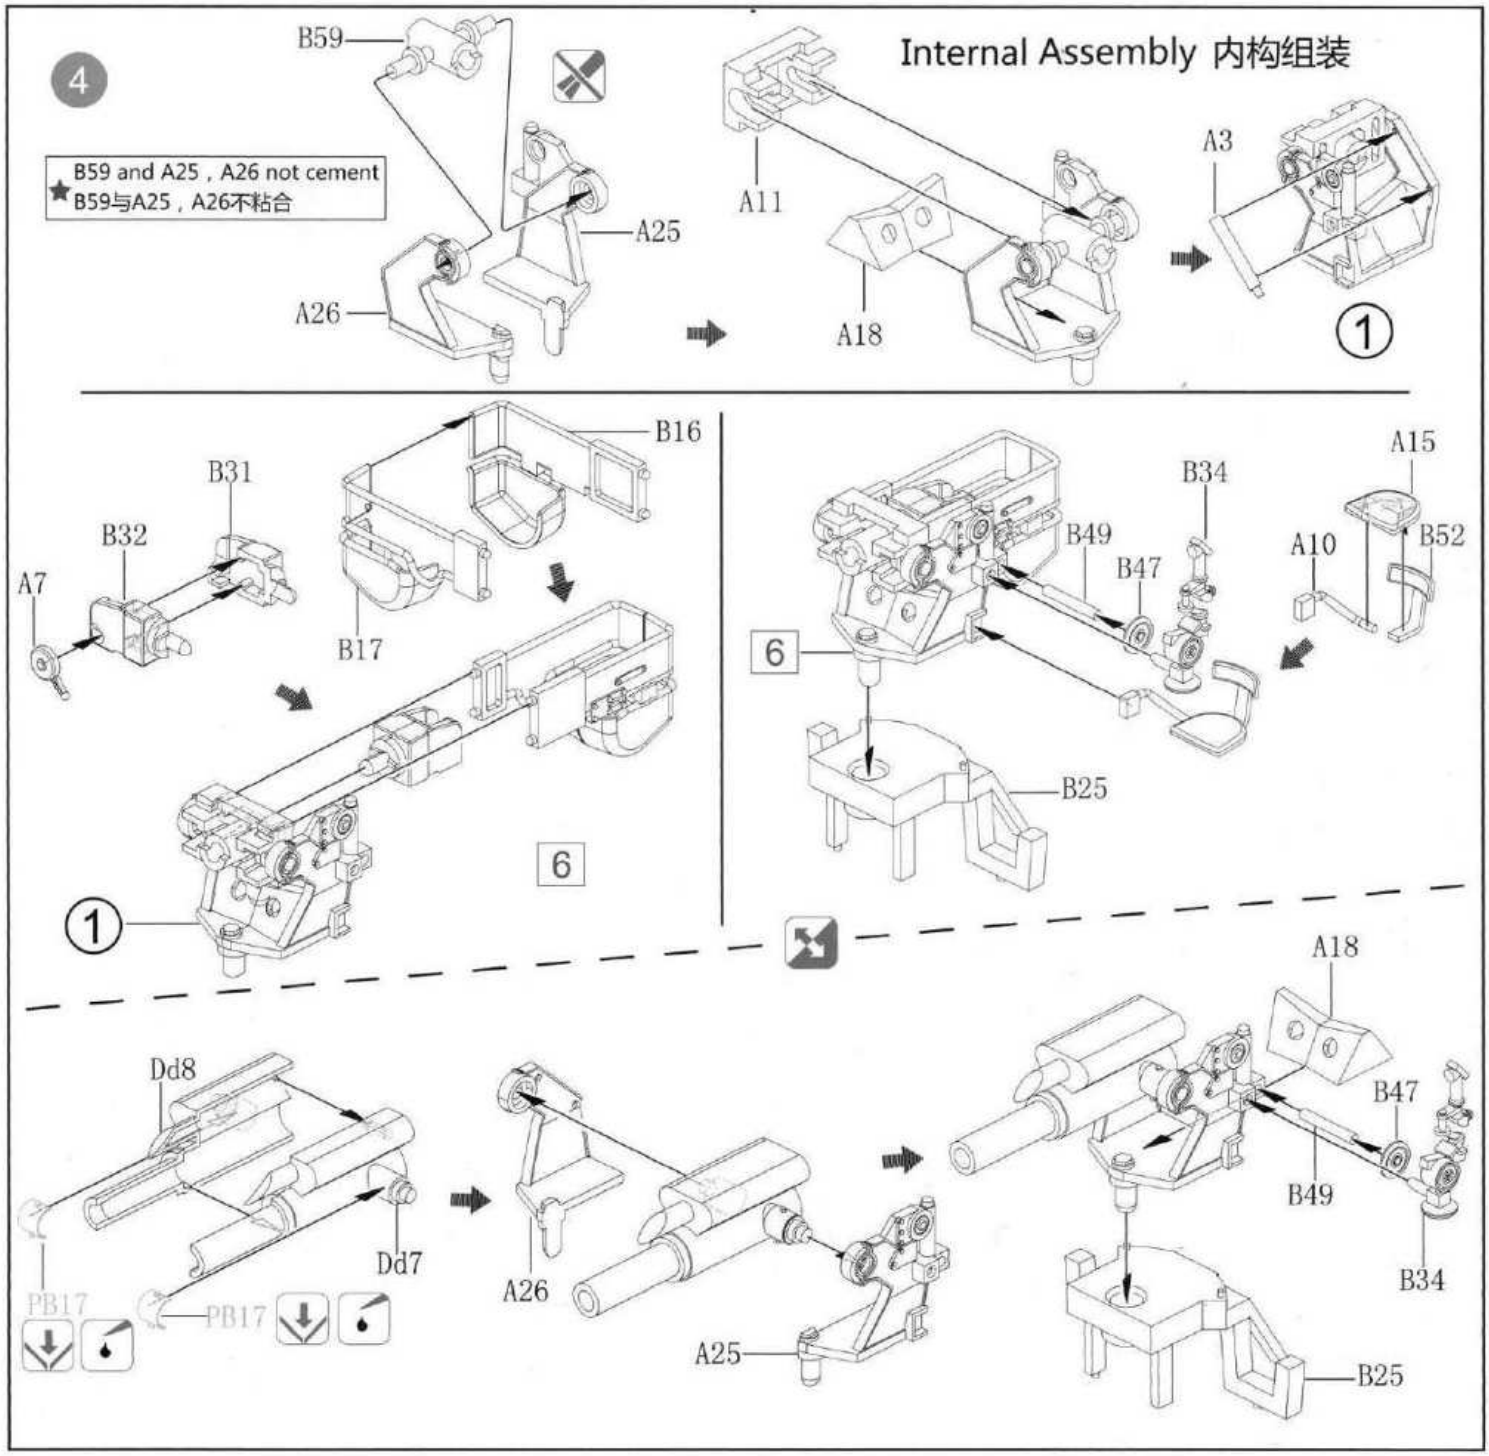


威骏模型 Copyright©2016 *All right reserved by Bronco Models

5

Glue The parts and Select The Appropriate Location
选择适当的位置粘合


L24 Gun Platform
L24火炮炮架

L48 Gun Platform
L48火炮炮架

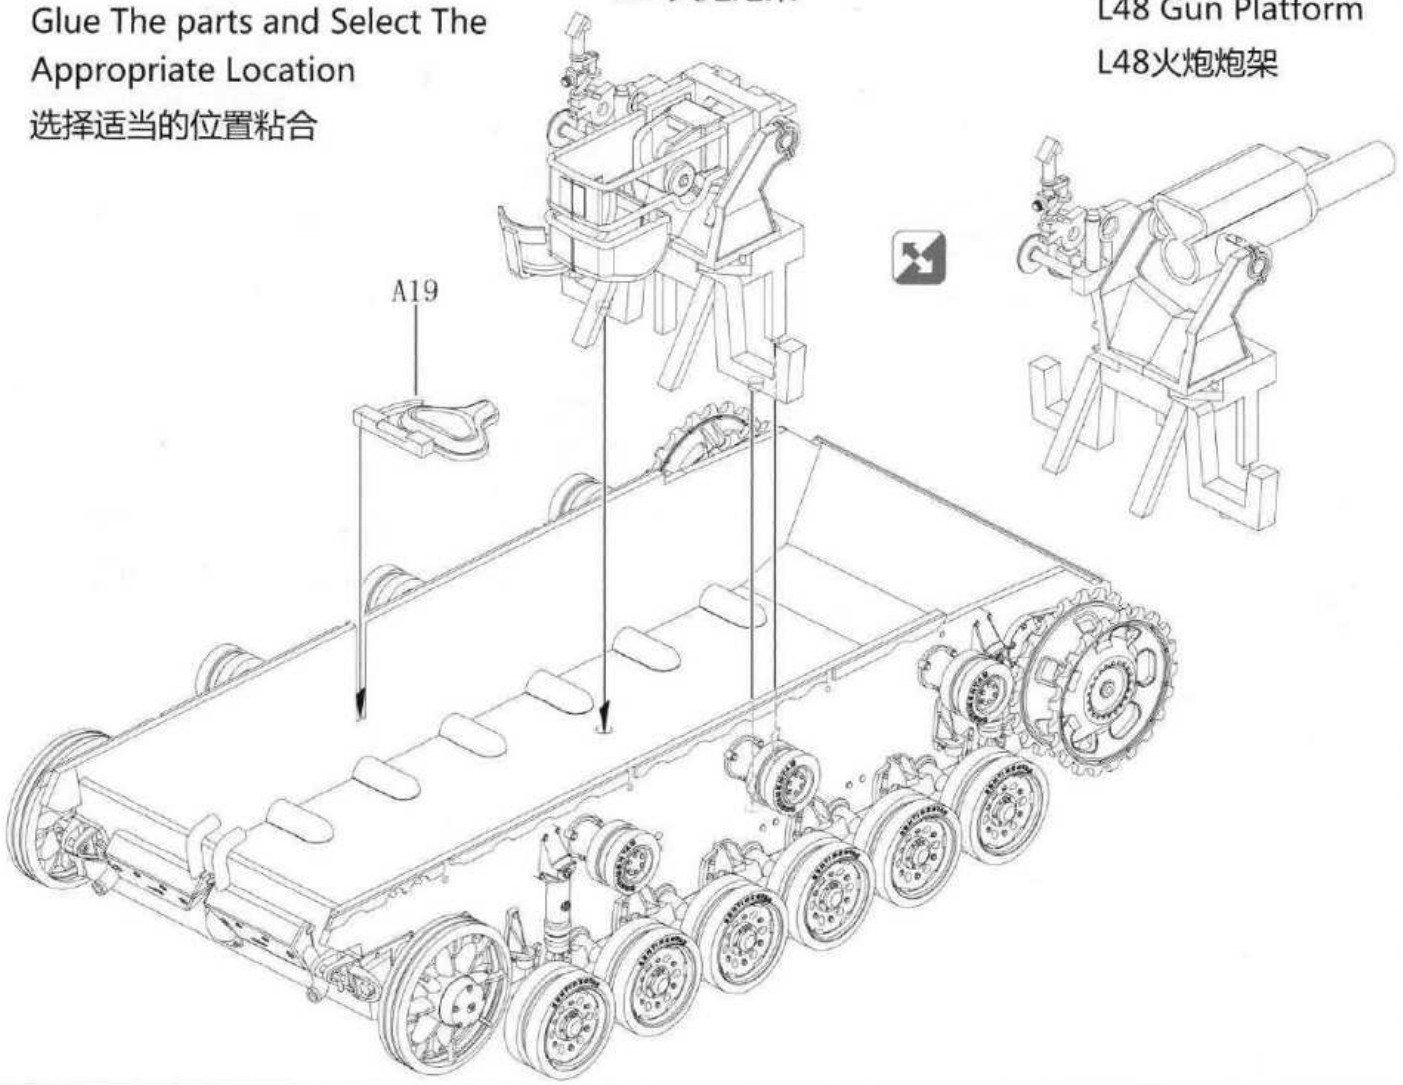


6


Upper Hull Installation Assembly
车身组装

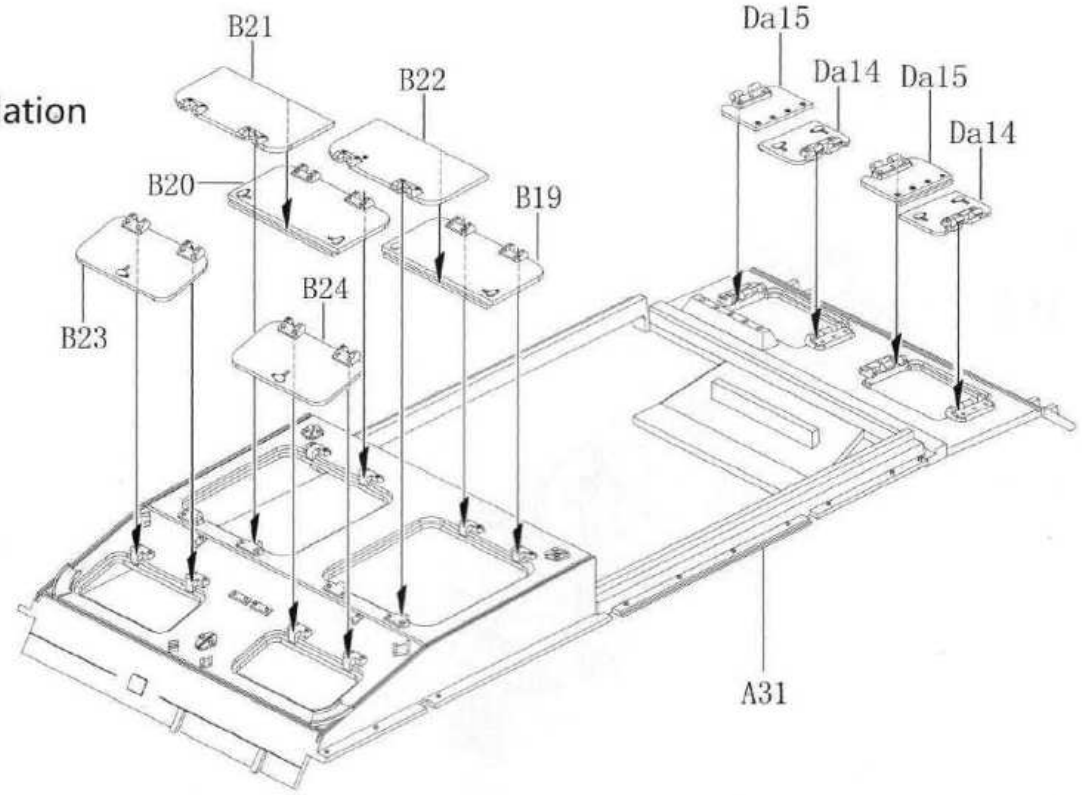

威骏模型 Copyright©2016 All right reserved by Bronco Models


ILLUSTRATION 图示说明：

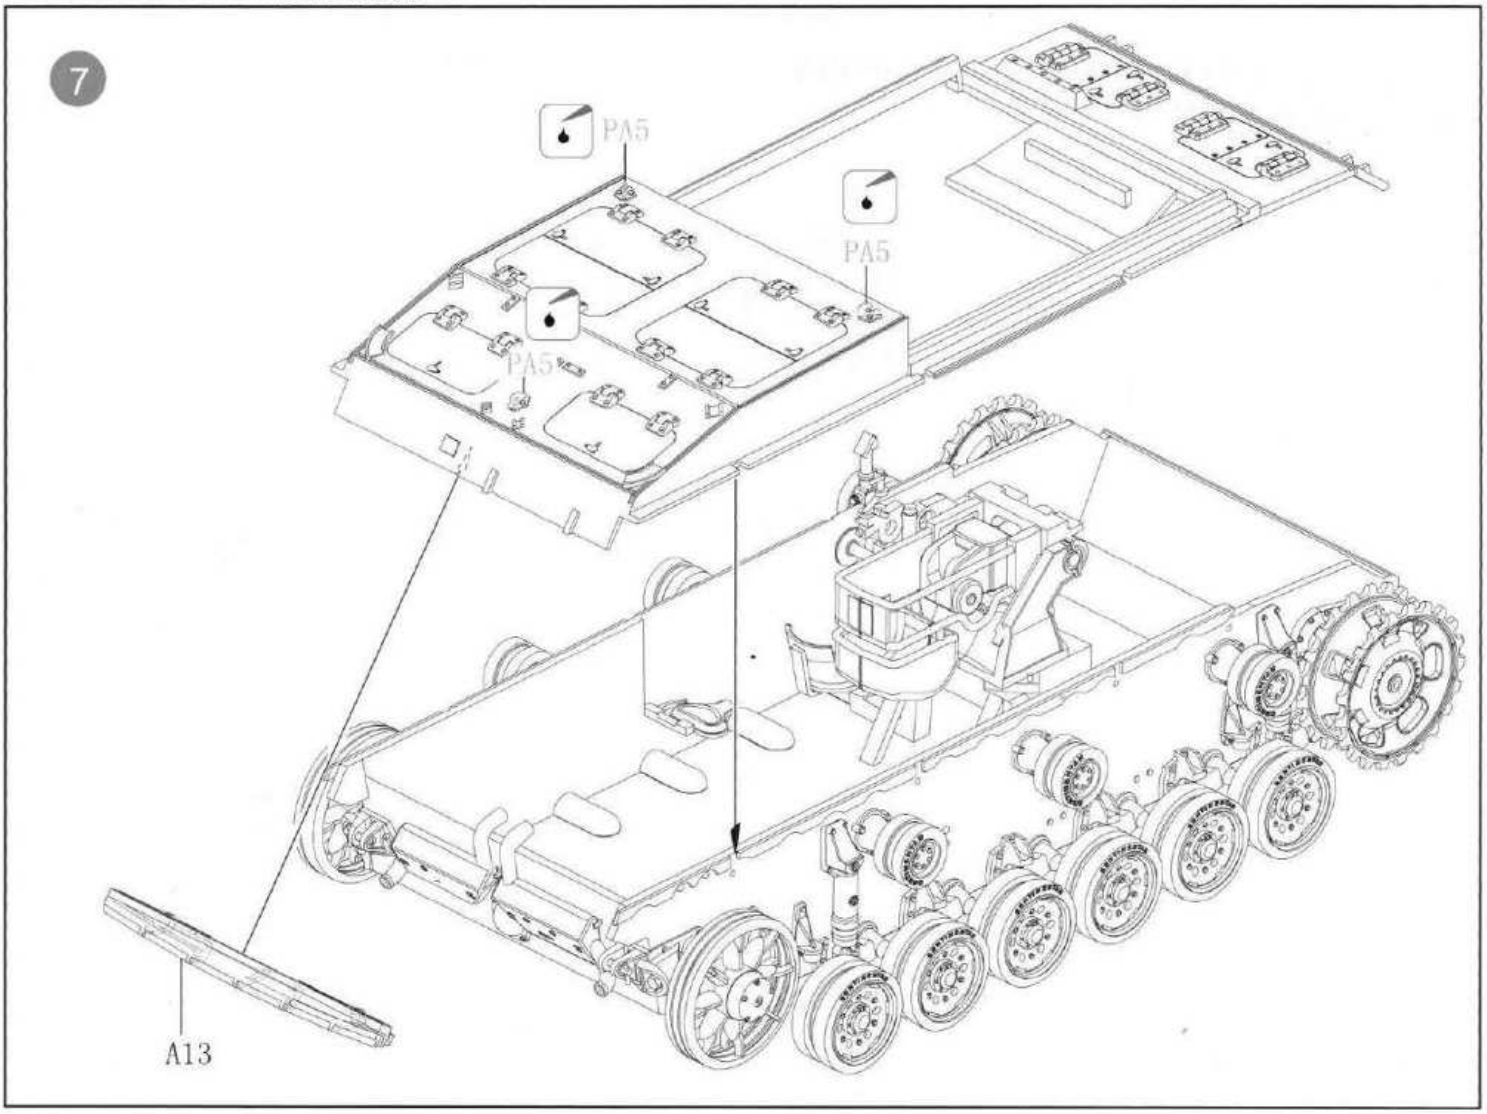

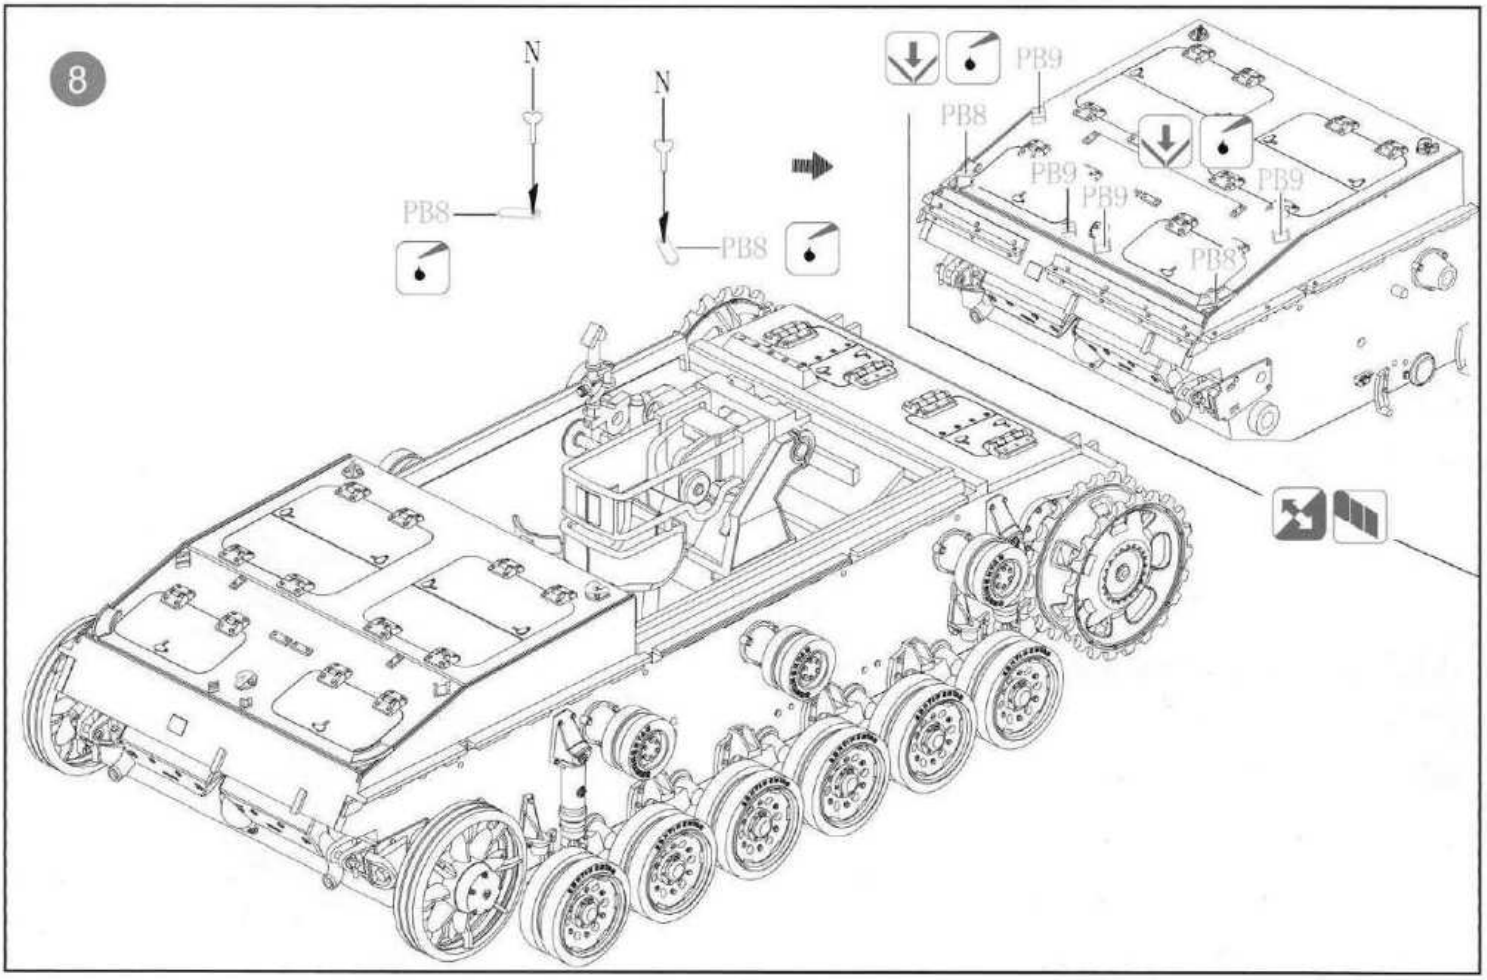



威龙模型 Copyright©2016 *All right reserved by Bronco Models


9 Fighting Compartment Assembly
战斗室组装

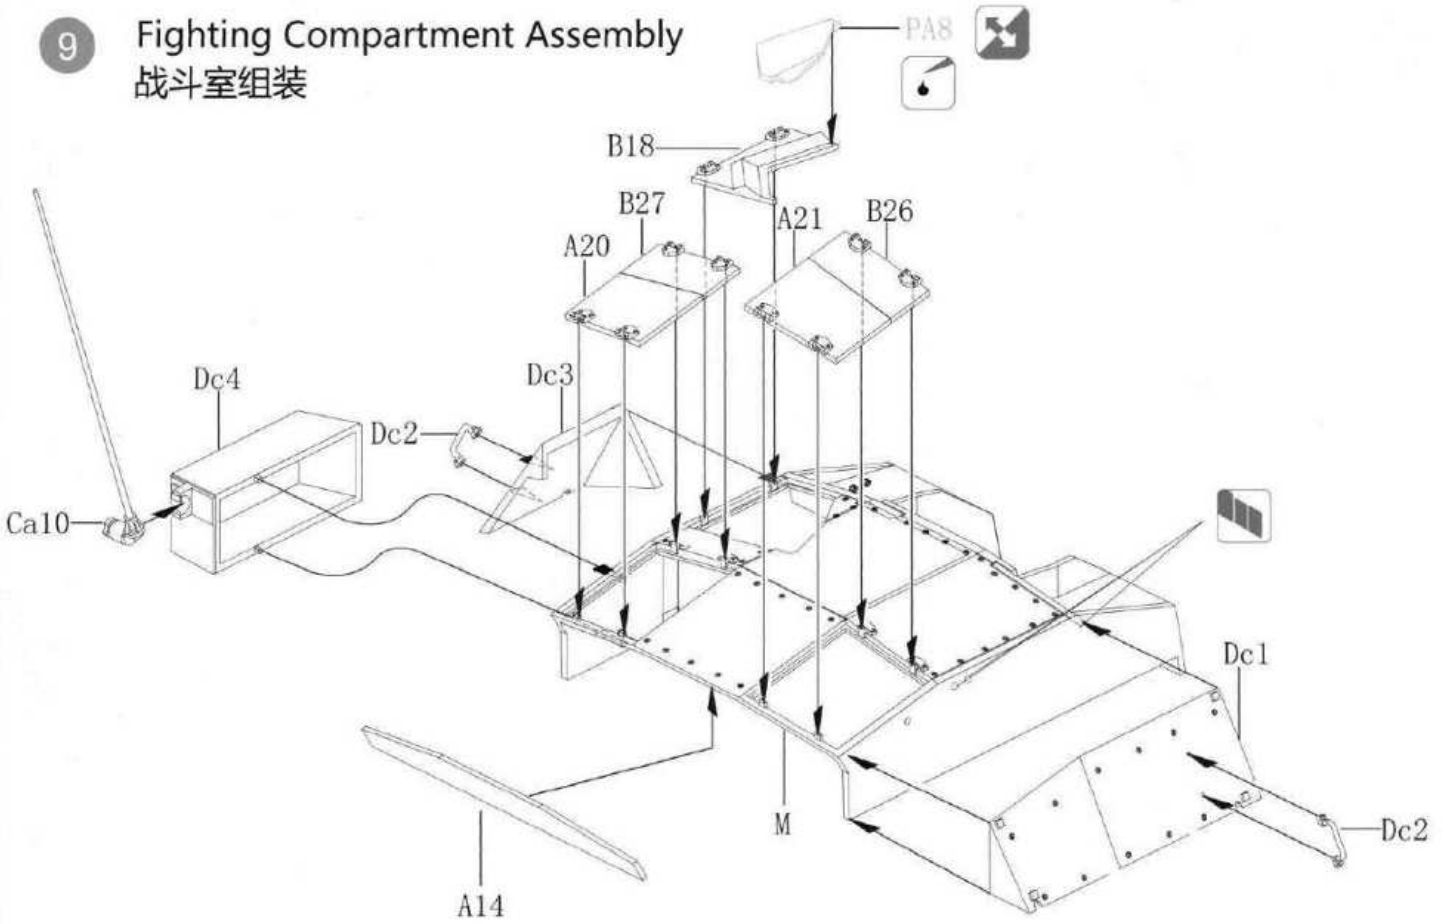

10

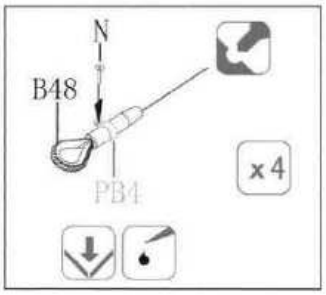

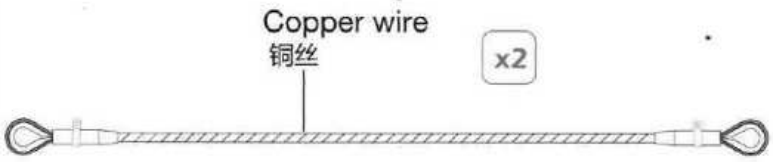

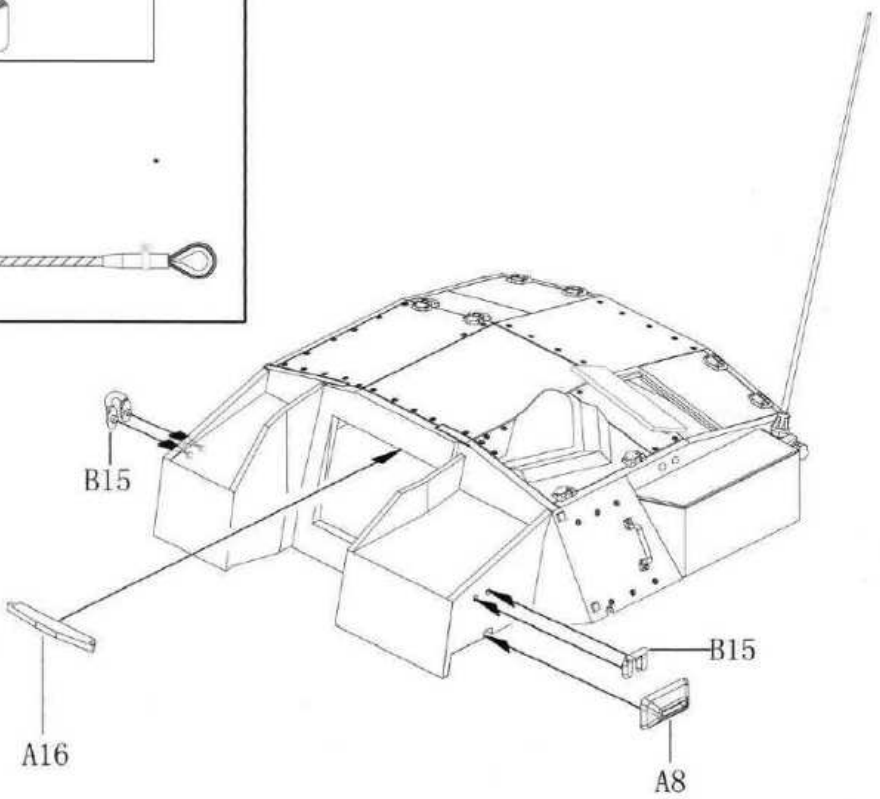


Making Saukopf Mantlet Without Installing A16 Parts

制作猪头炮盾时无需安装A16


威骏模型 Copyright©2016 *All right reserved by Bronco Models

ILLUSTRATION 图示说明：

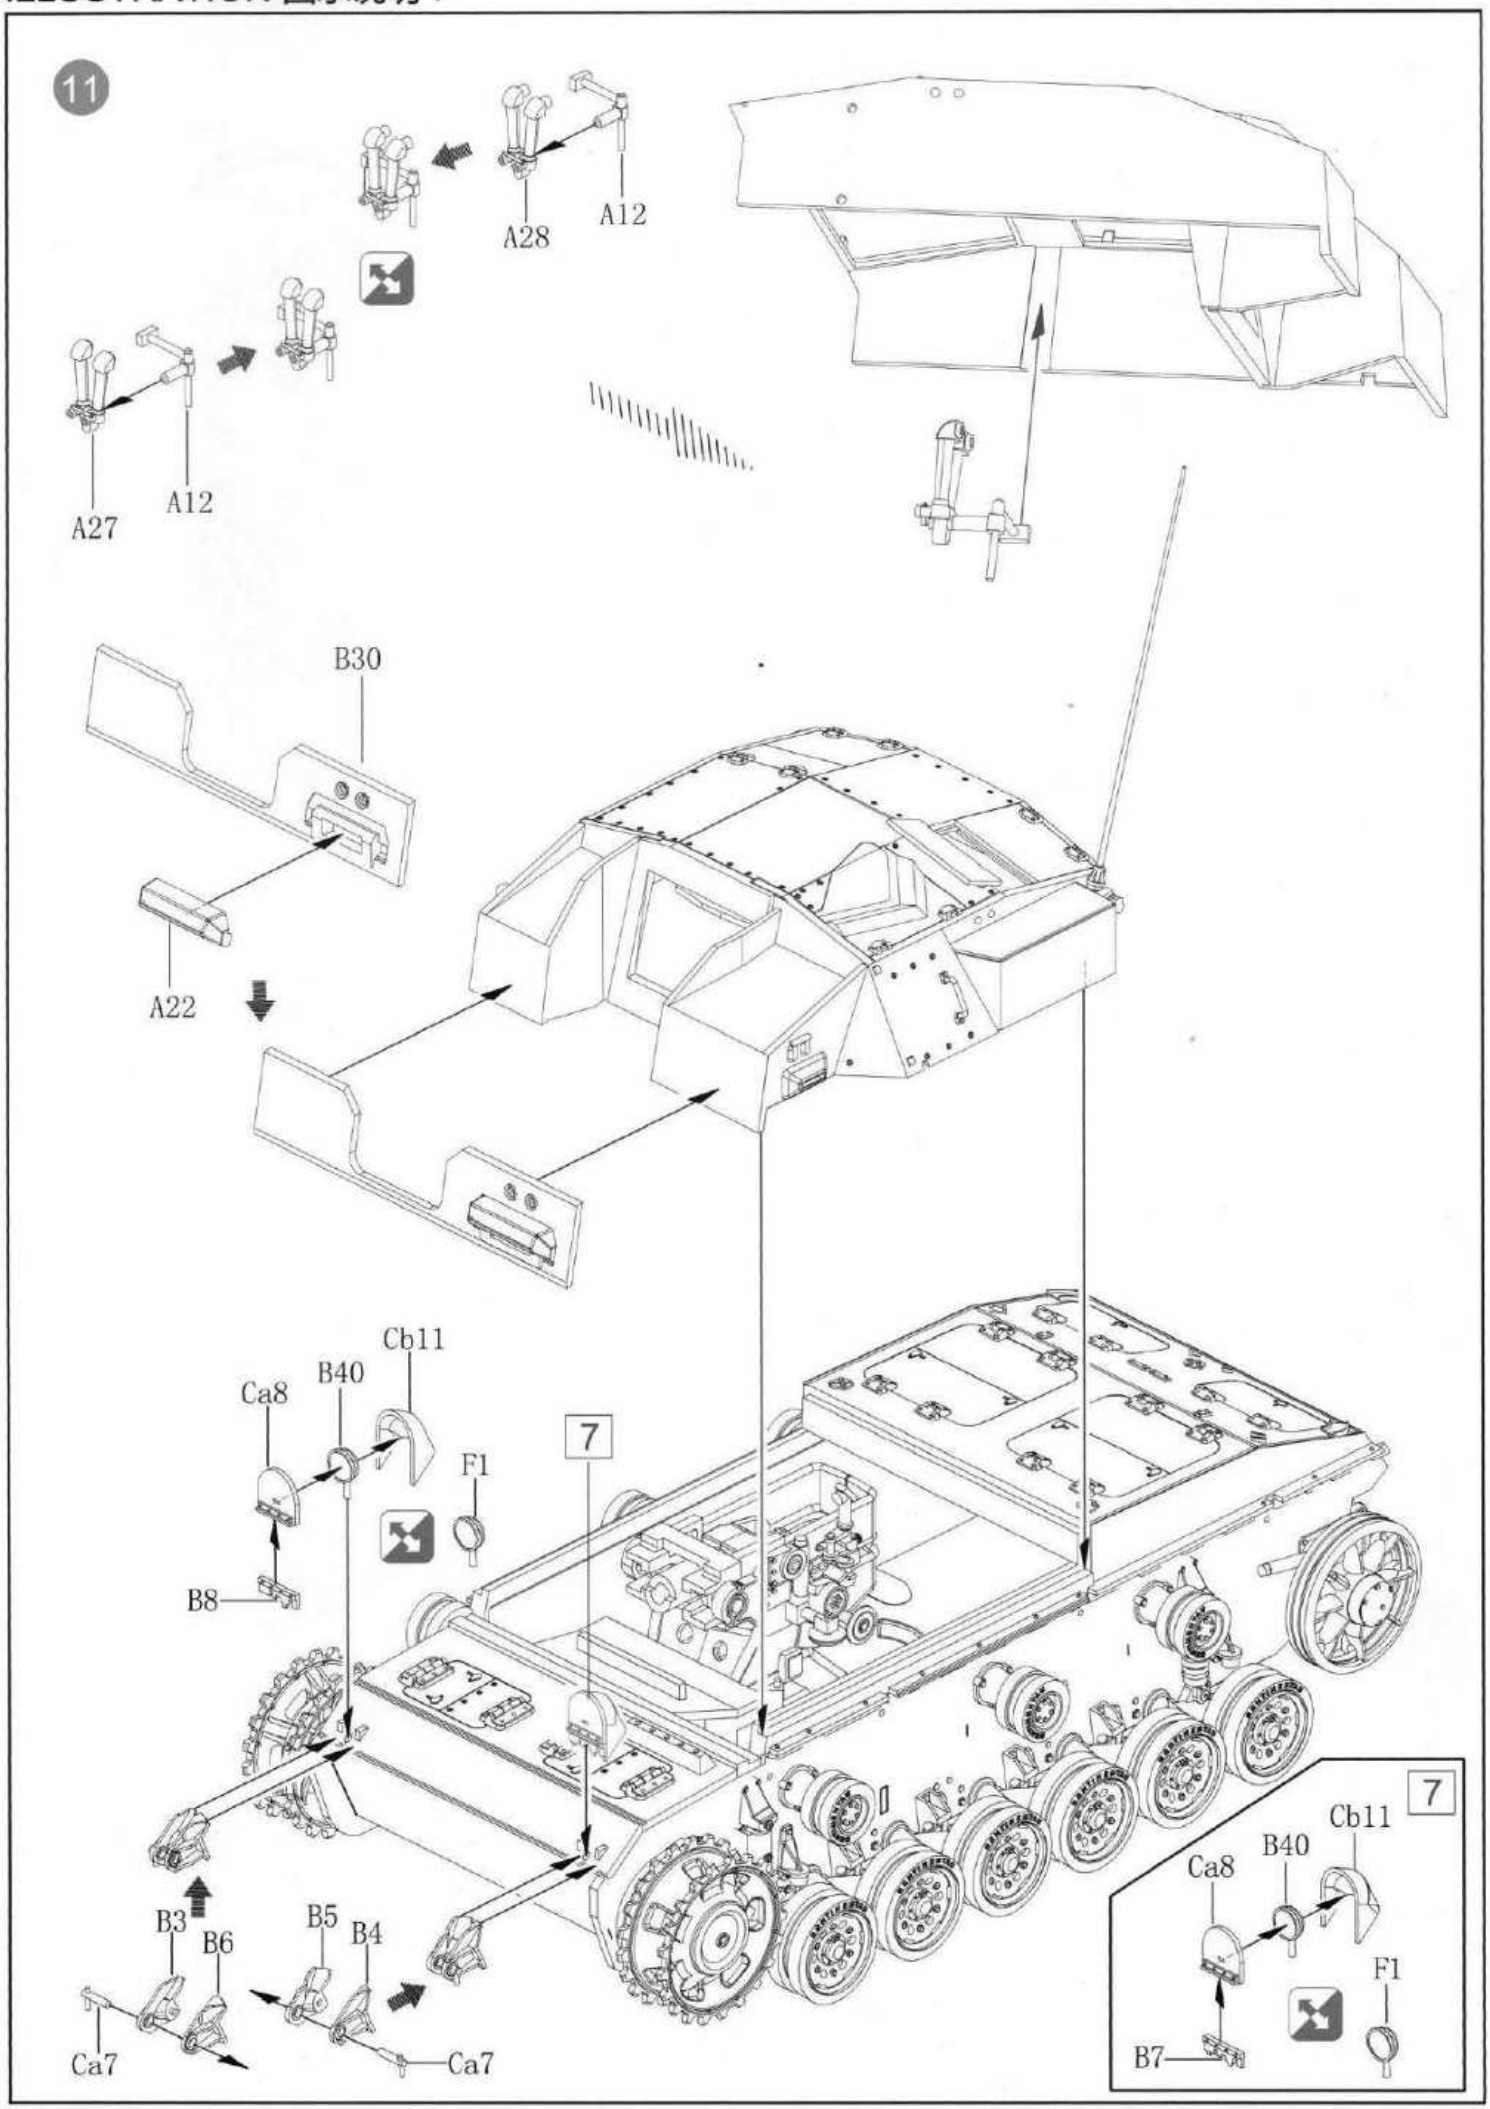


威骏模型 Copyright©2016 *All right reserved by Bronco Models


ILLUSTRATION 图示说明：

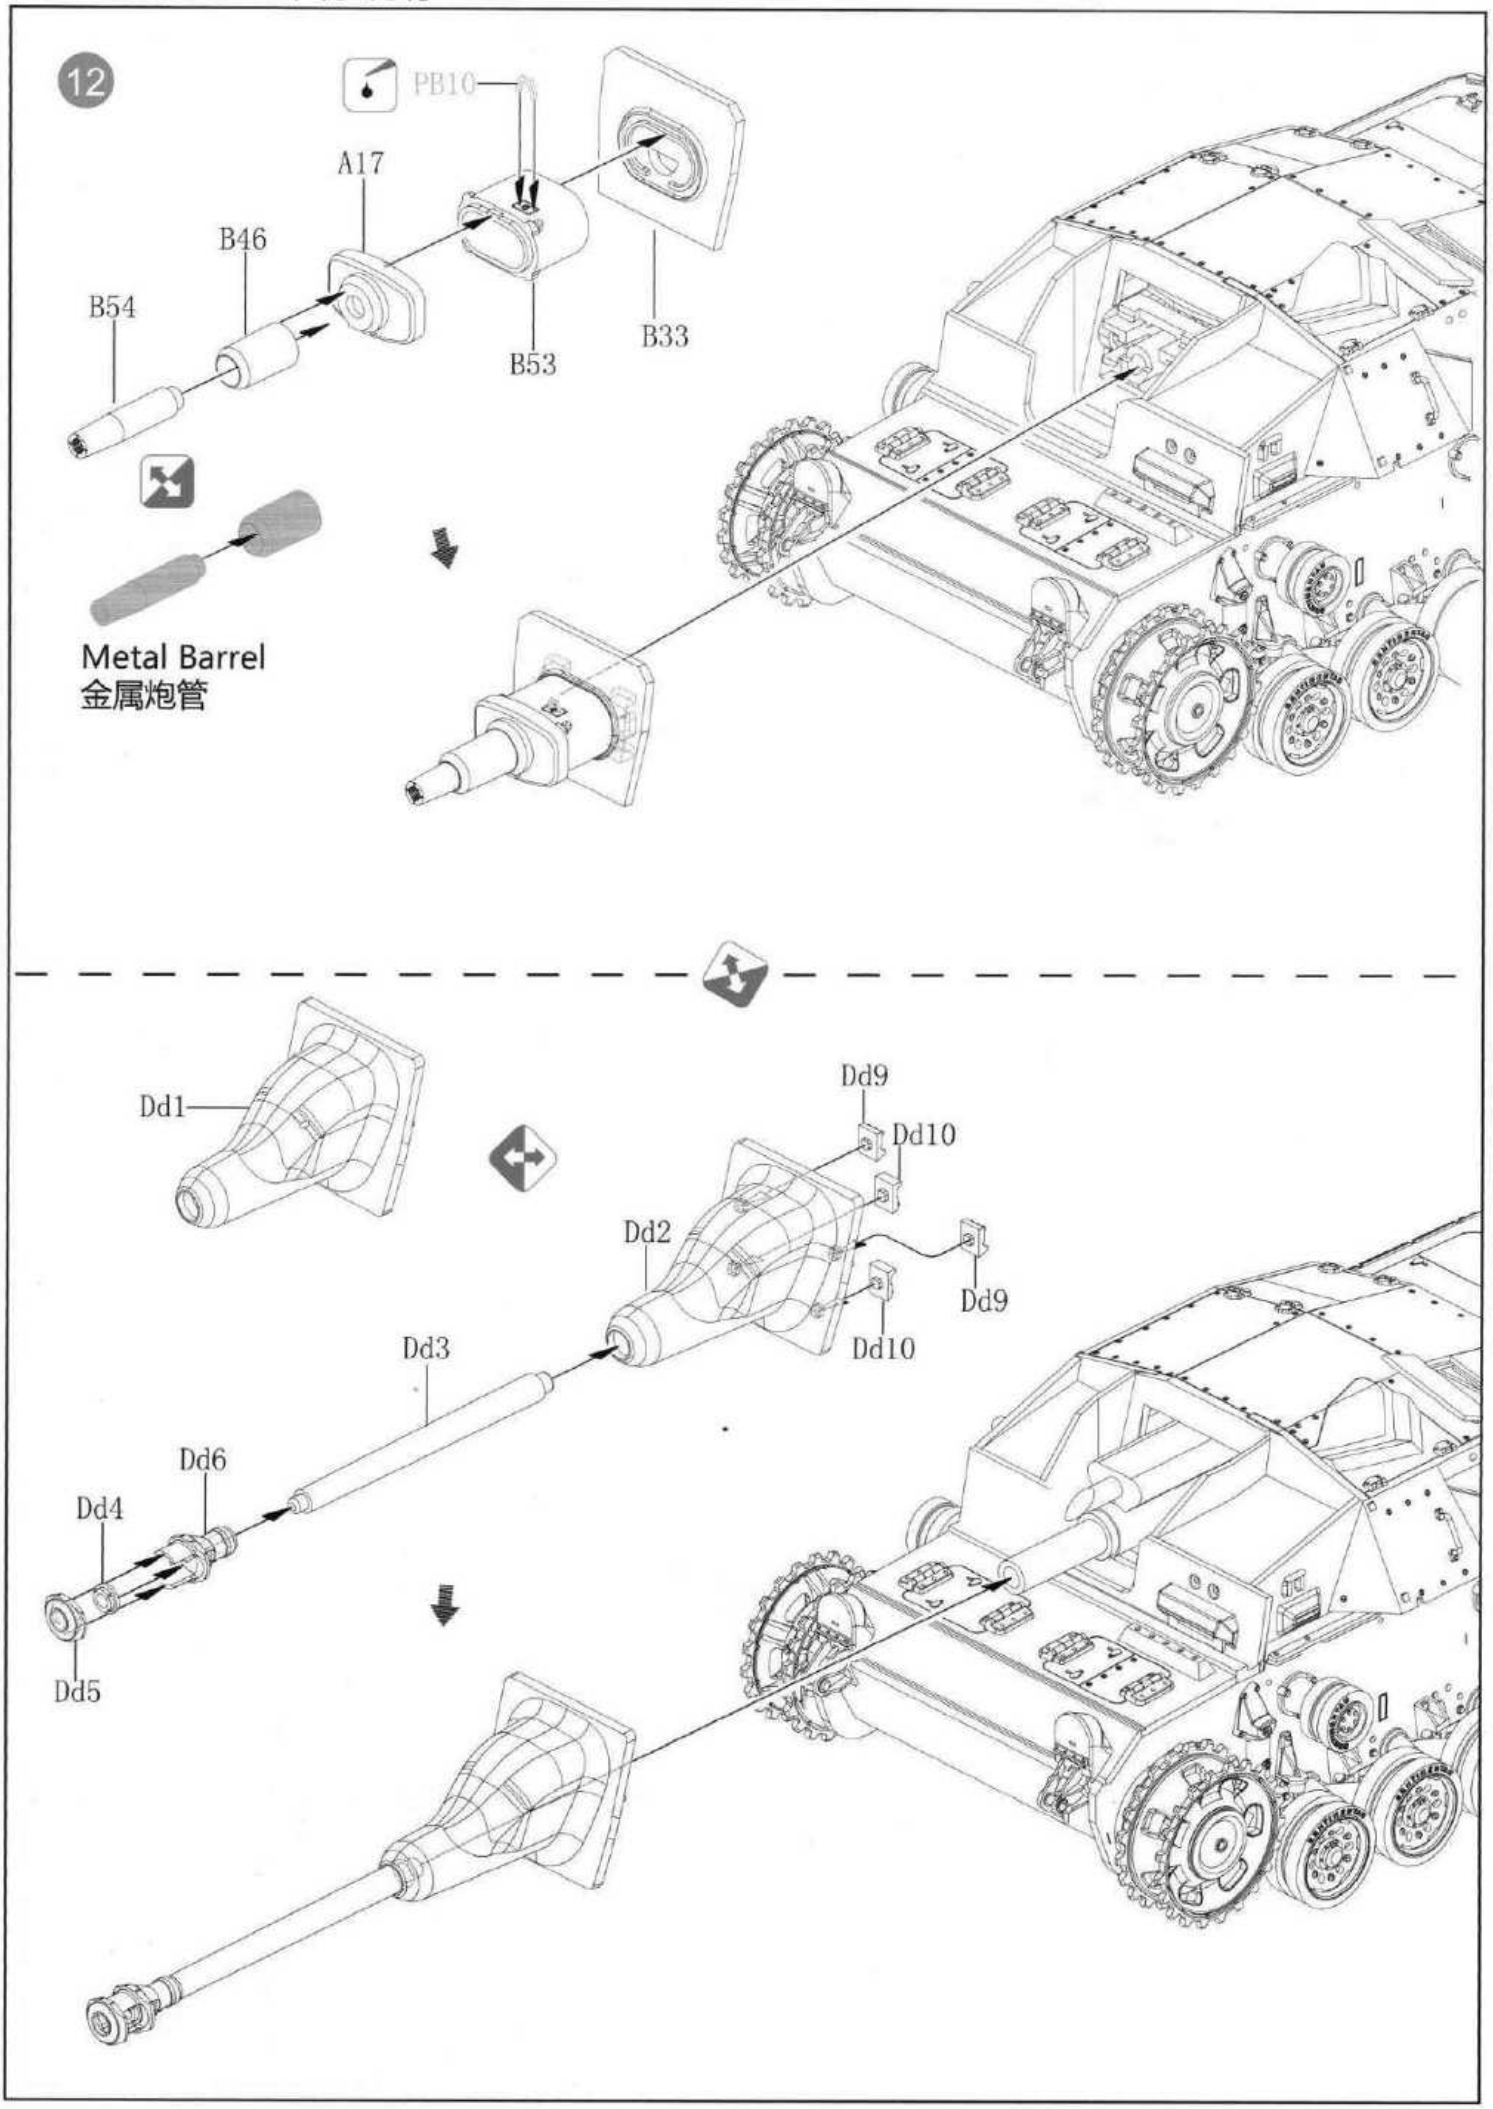

威骏模型 Copyright©2016 'All right reserved by Bronco Models


ILLUSTRATION 图示说明：

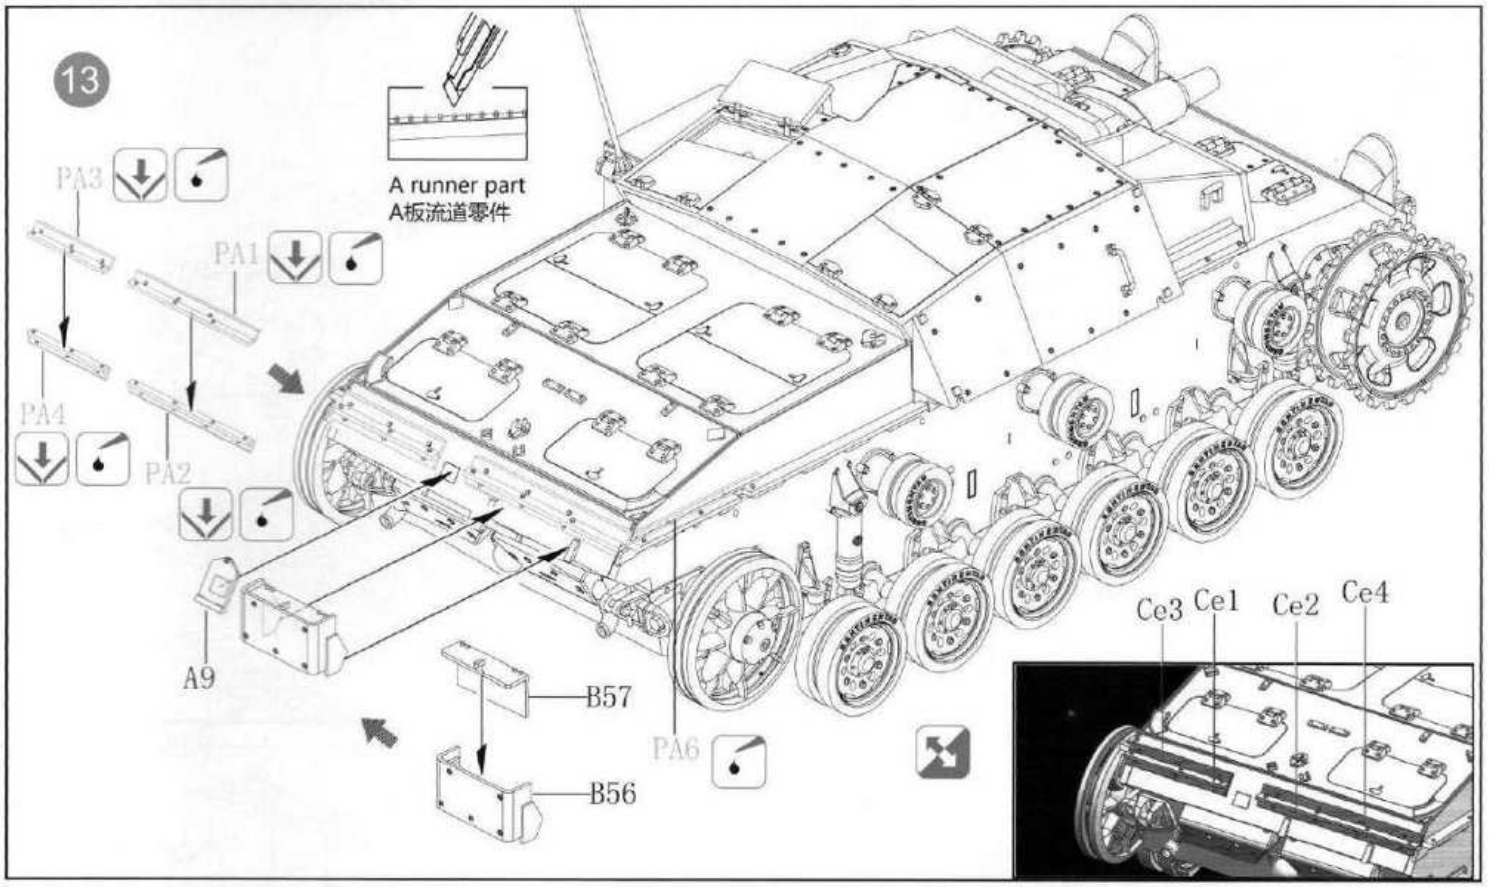

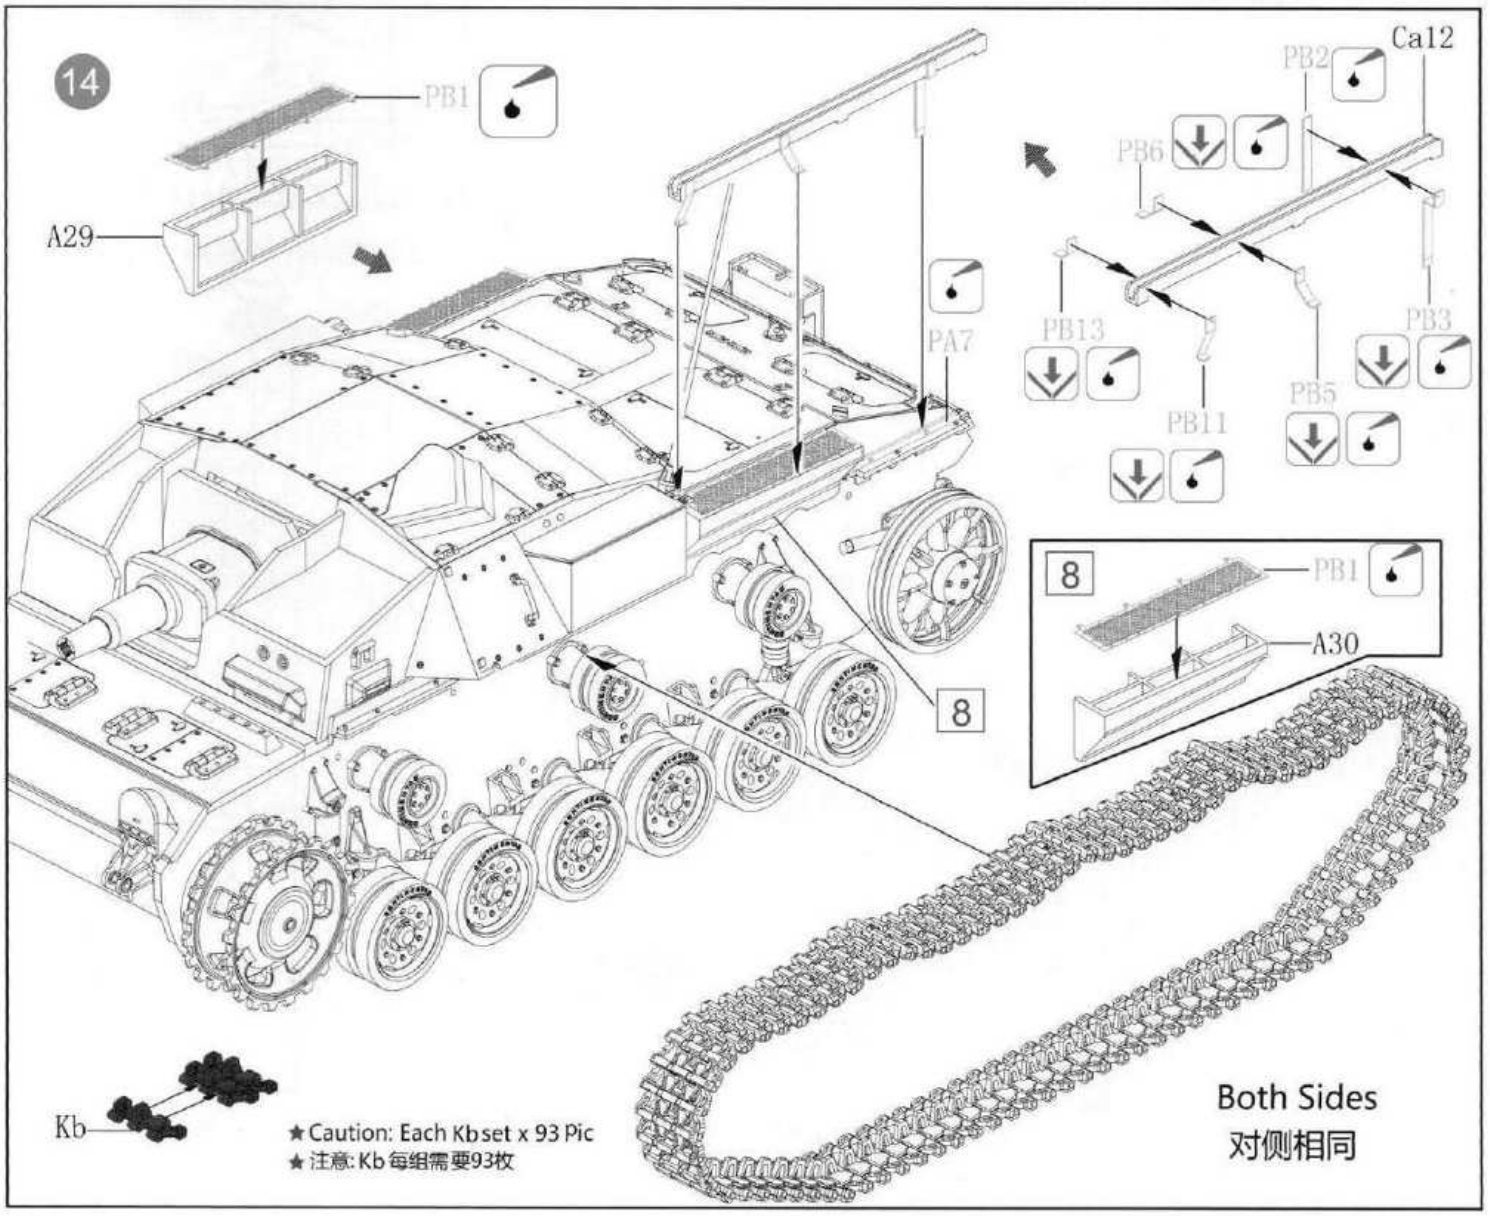


威骏模型 Copyright©2016 *All right reserved by Bronco Models


15 Angles and Tools Assembly
翼子板及车载工具组装

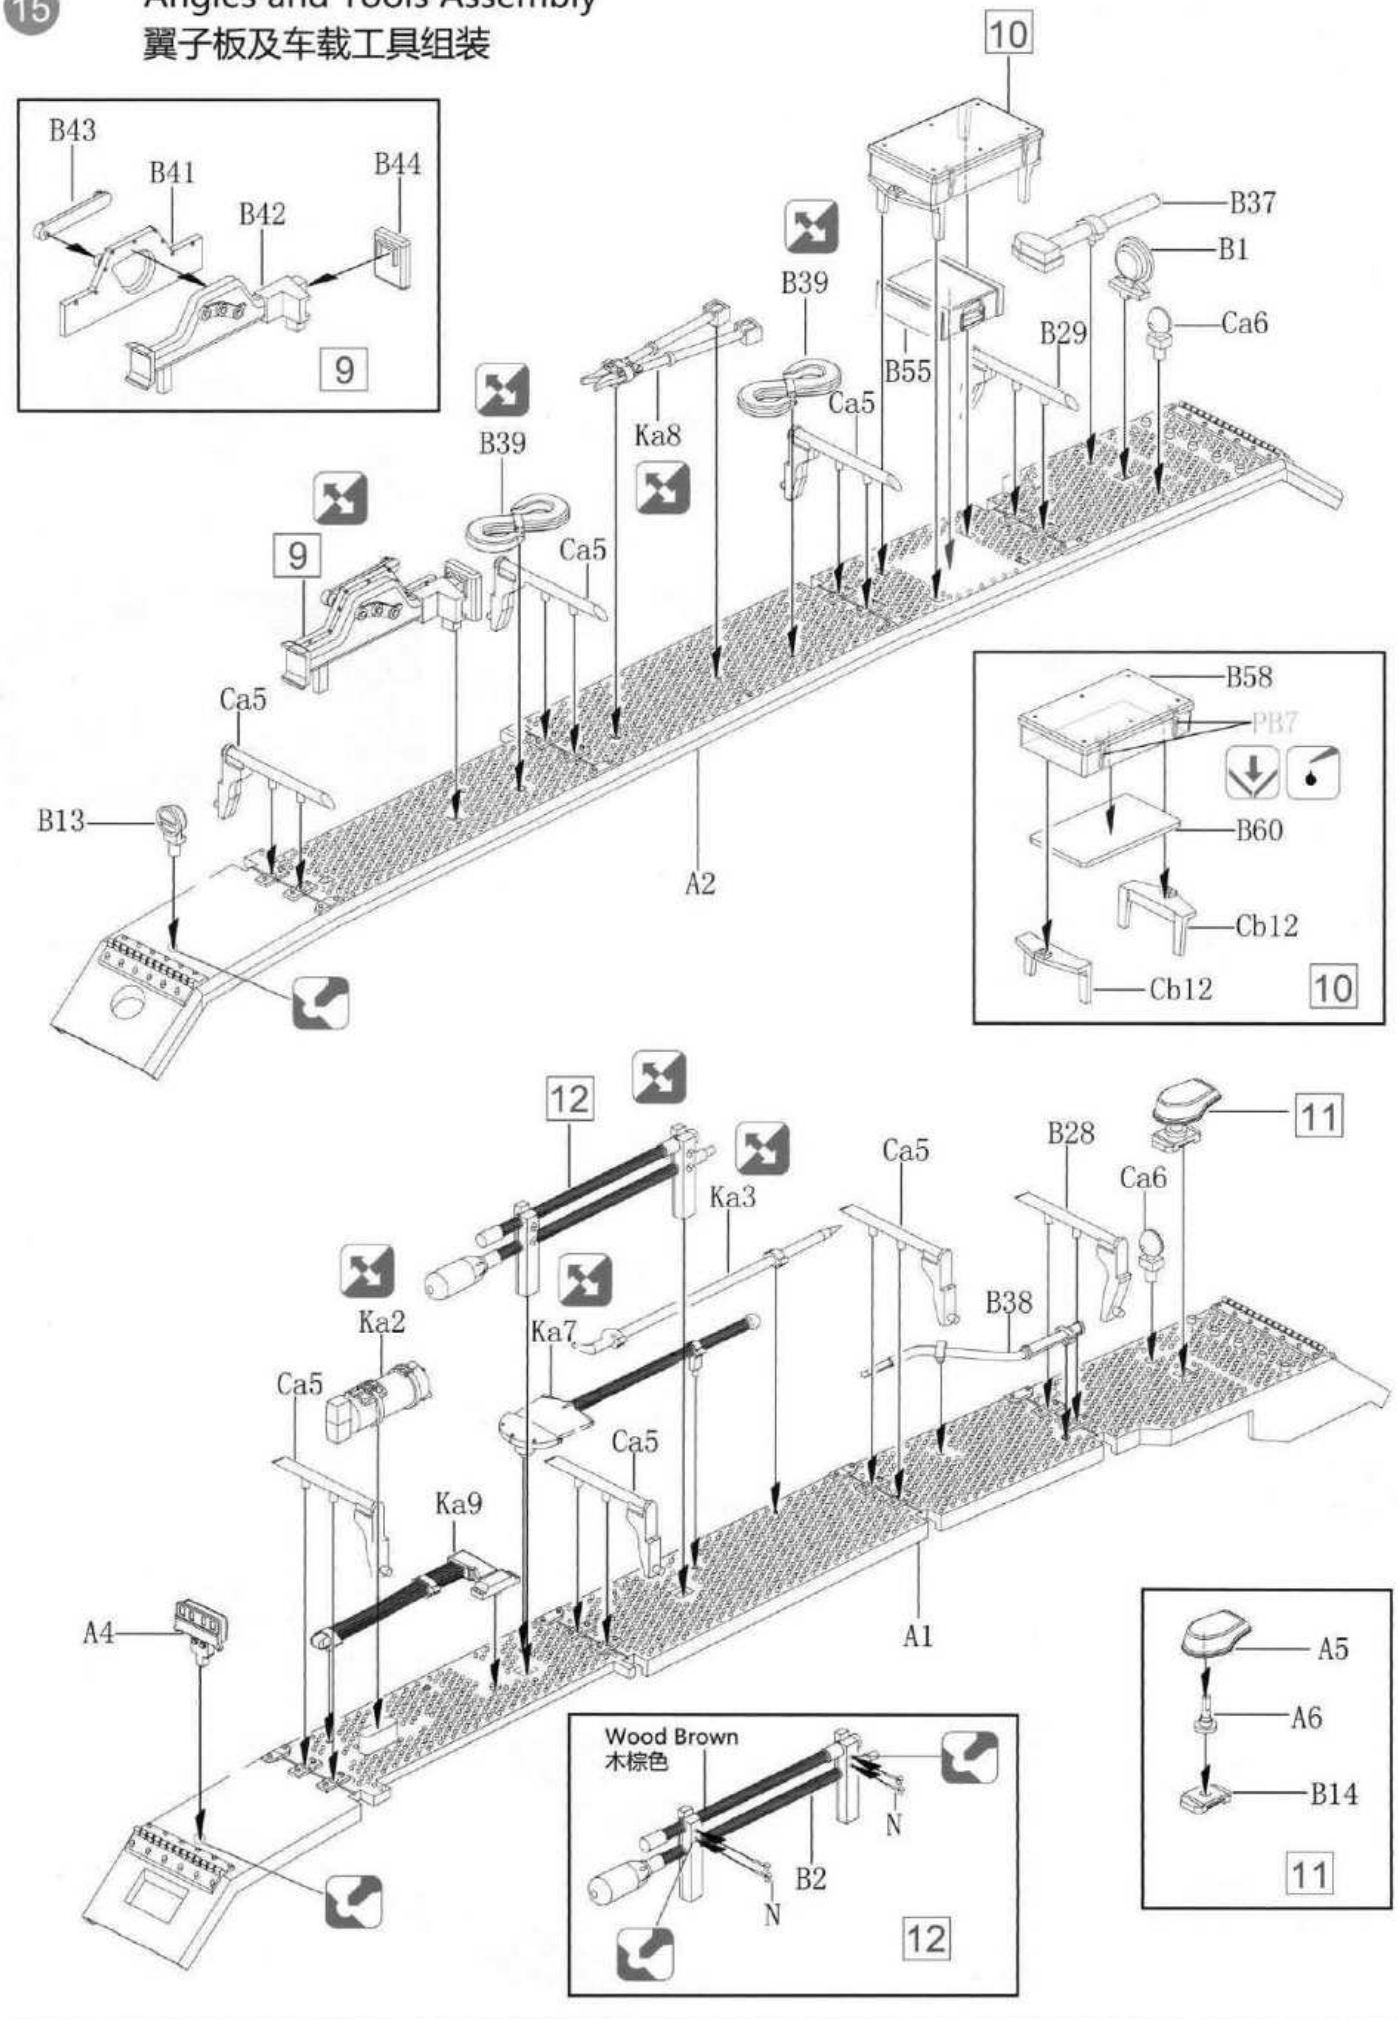

威骏模型 Copyright©2016 *All right reserved by Bronco Models

ILLUSTRATION 图示说明：

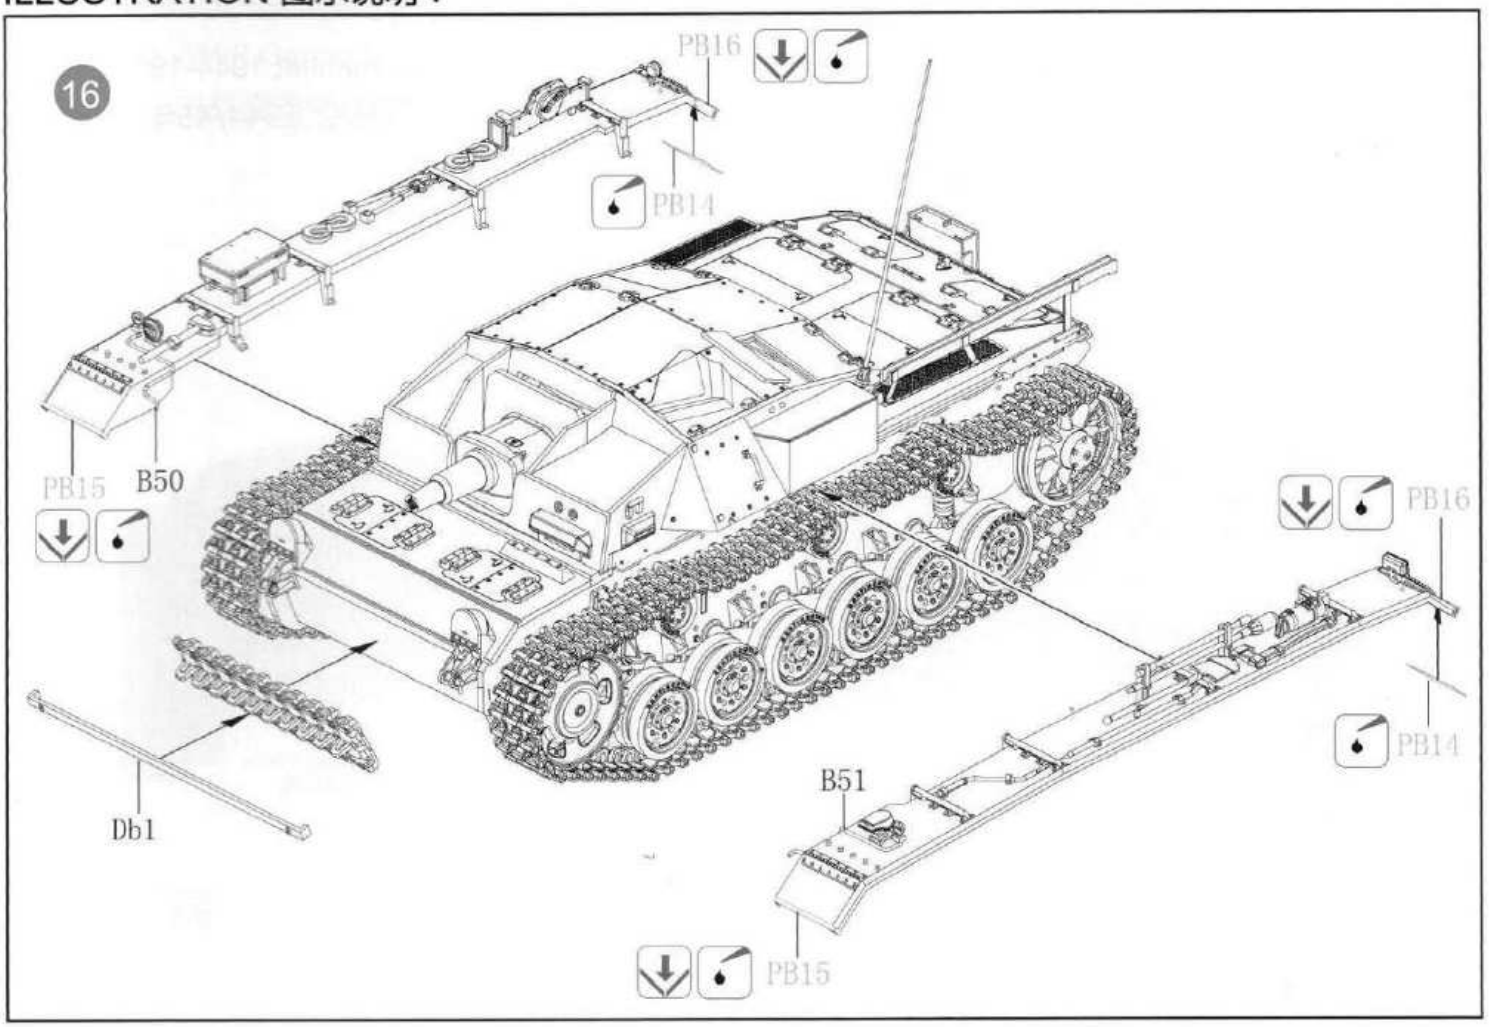

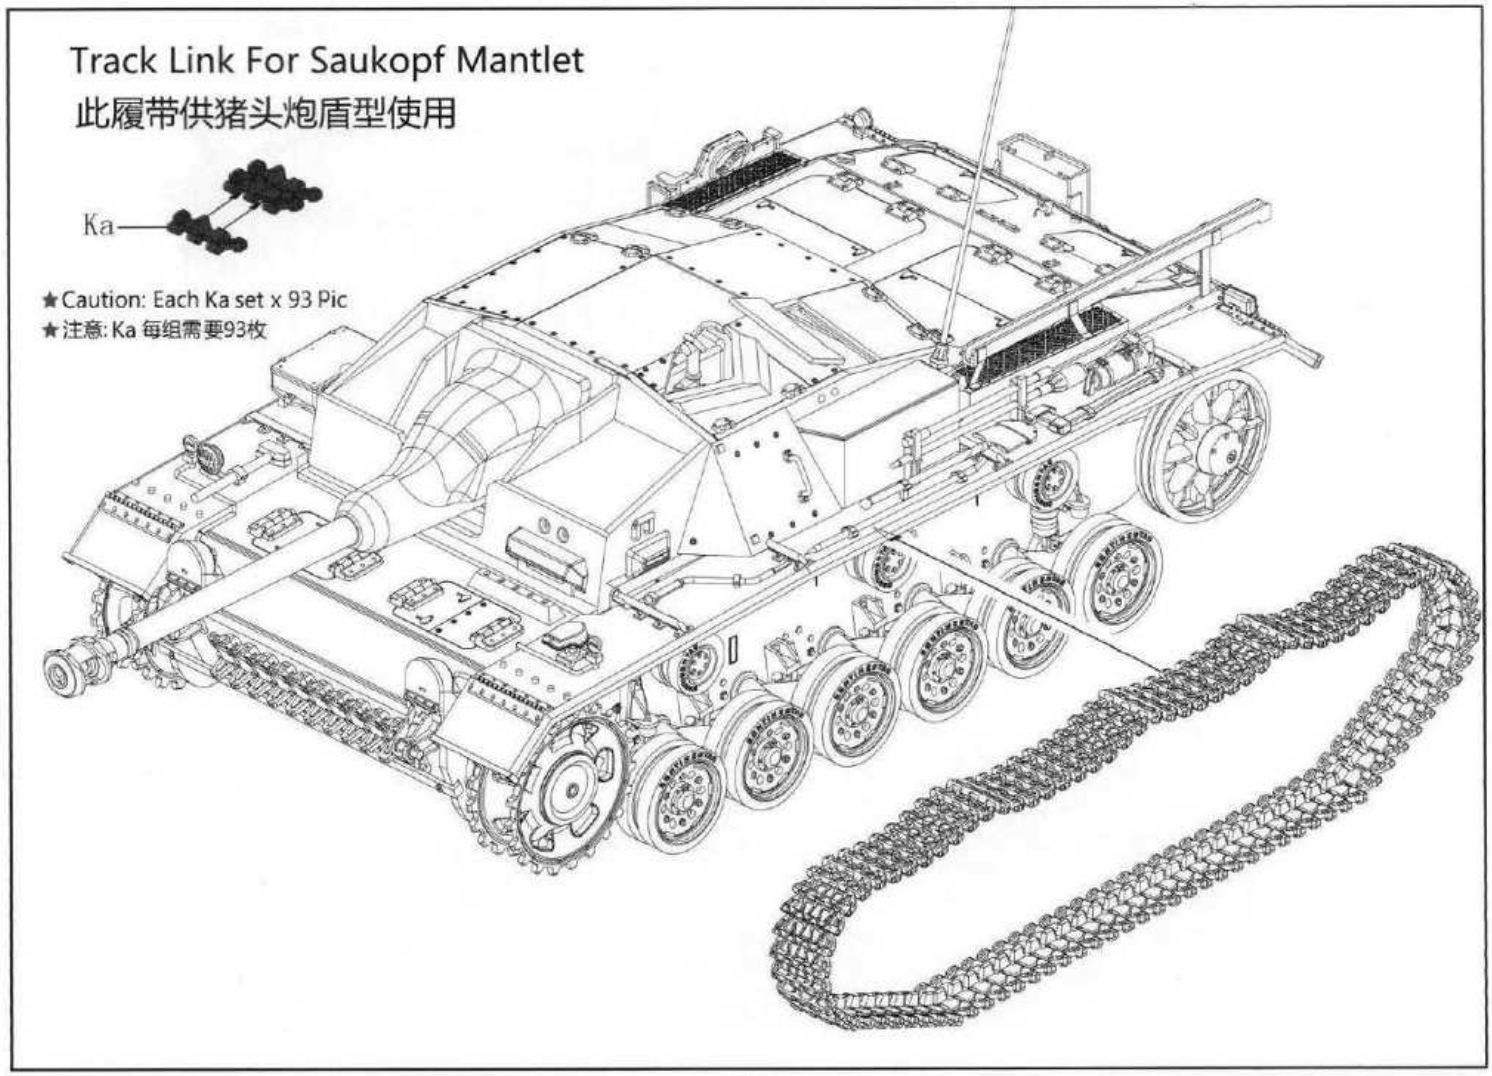



威骏模型 Copyright©2016 *All right reserved by Bronco Models


DECAL&COLOUR GUIDE 水贴及涂色指示：

Option1:WWII German StuG III Ausf C with 75mm StuK 40/L48 "Saukopf"mantlet 1944-1945

二战德国三号C型突击炮改装猪头炮盾75毫米长炮管型阿登突出部战役，1944/45年

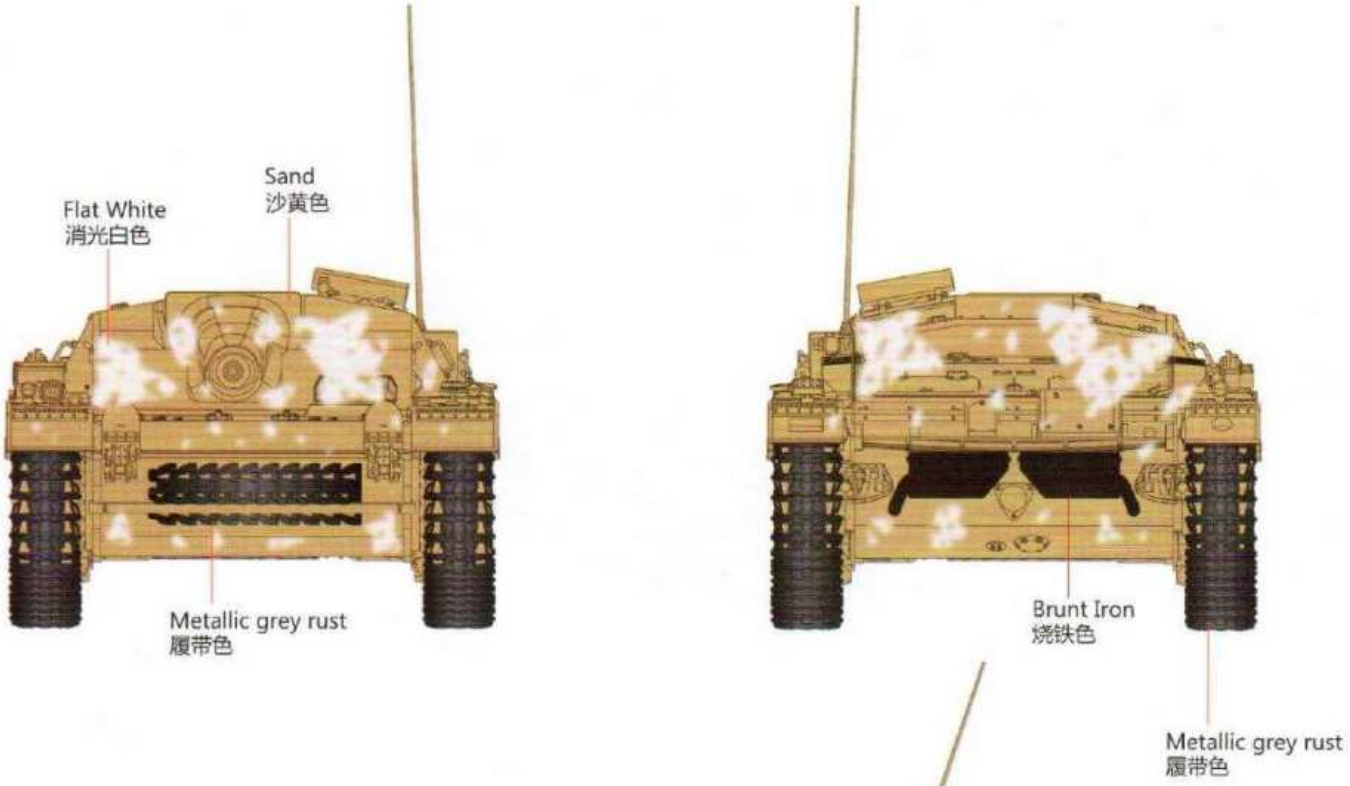

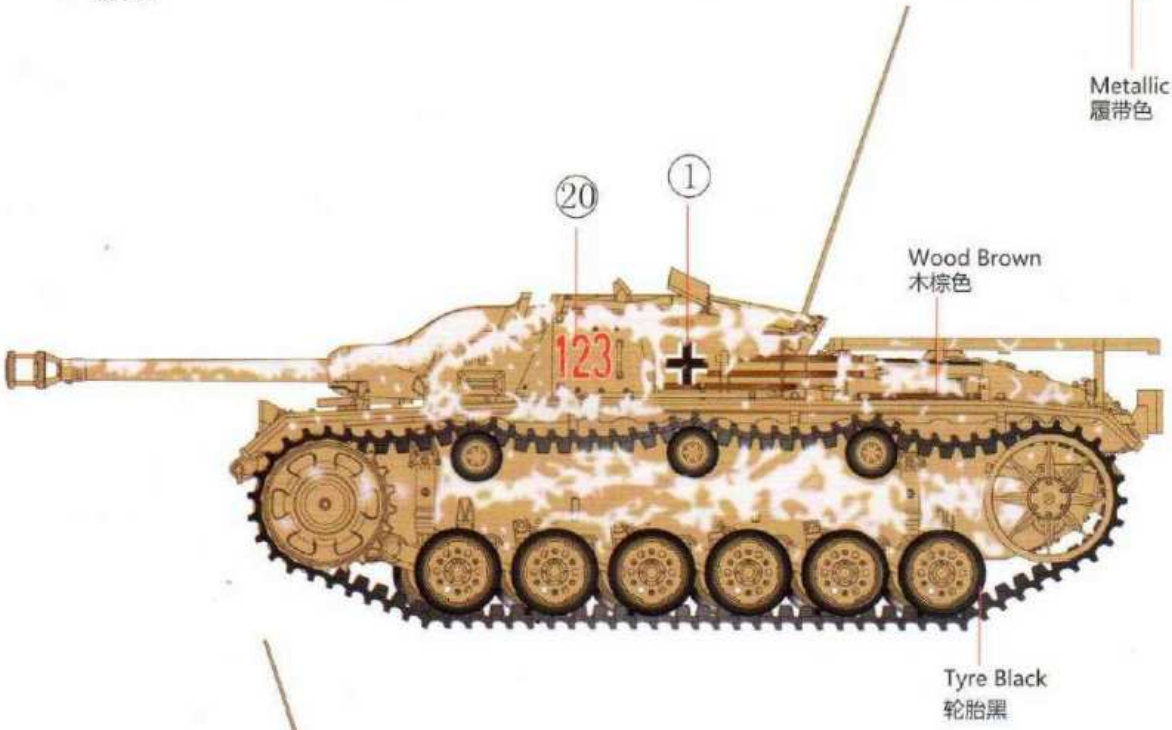

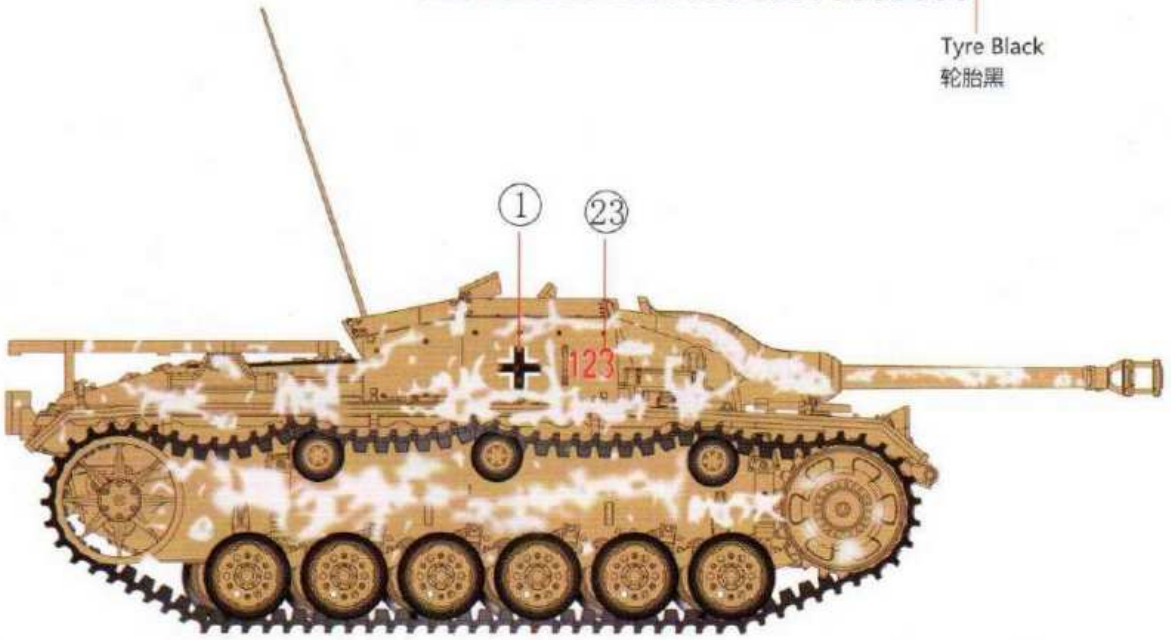


威骏模型 Copyright©2016 All right reserved by Bronco Models

DECAL&COLOUR GUIDE 水贴及涂色指示：

Option2:WWII German StuG III Ausf D. StuG Abt 186. Russia.1942

二战德国第186突击炮营俄国战场,1942年

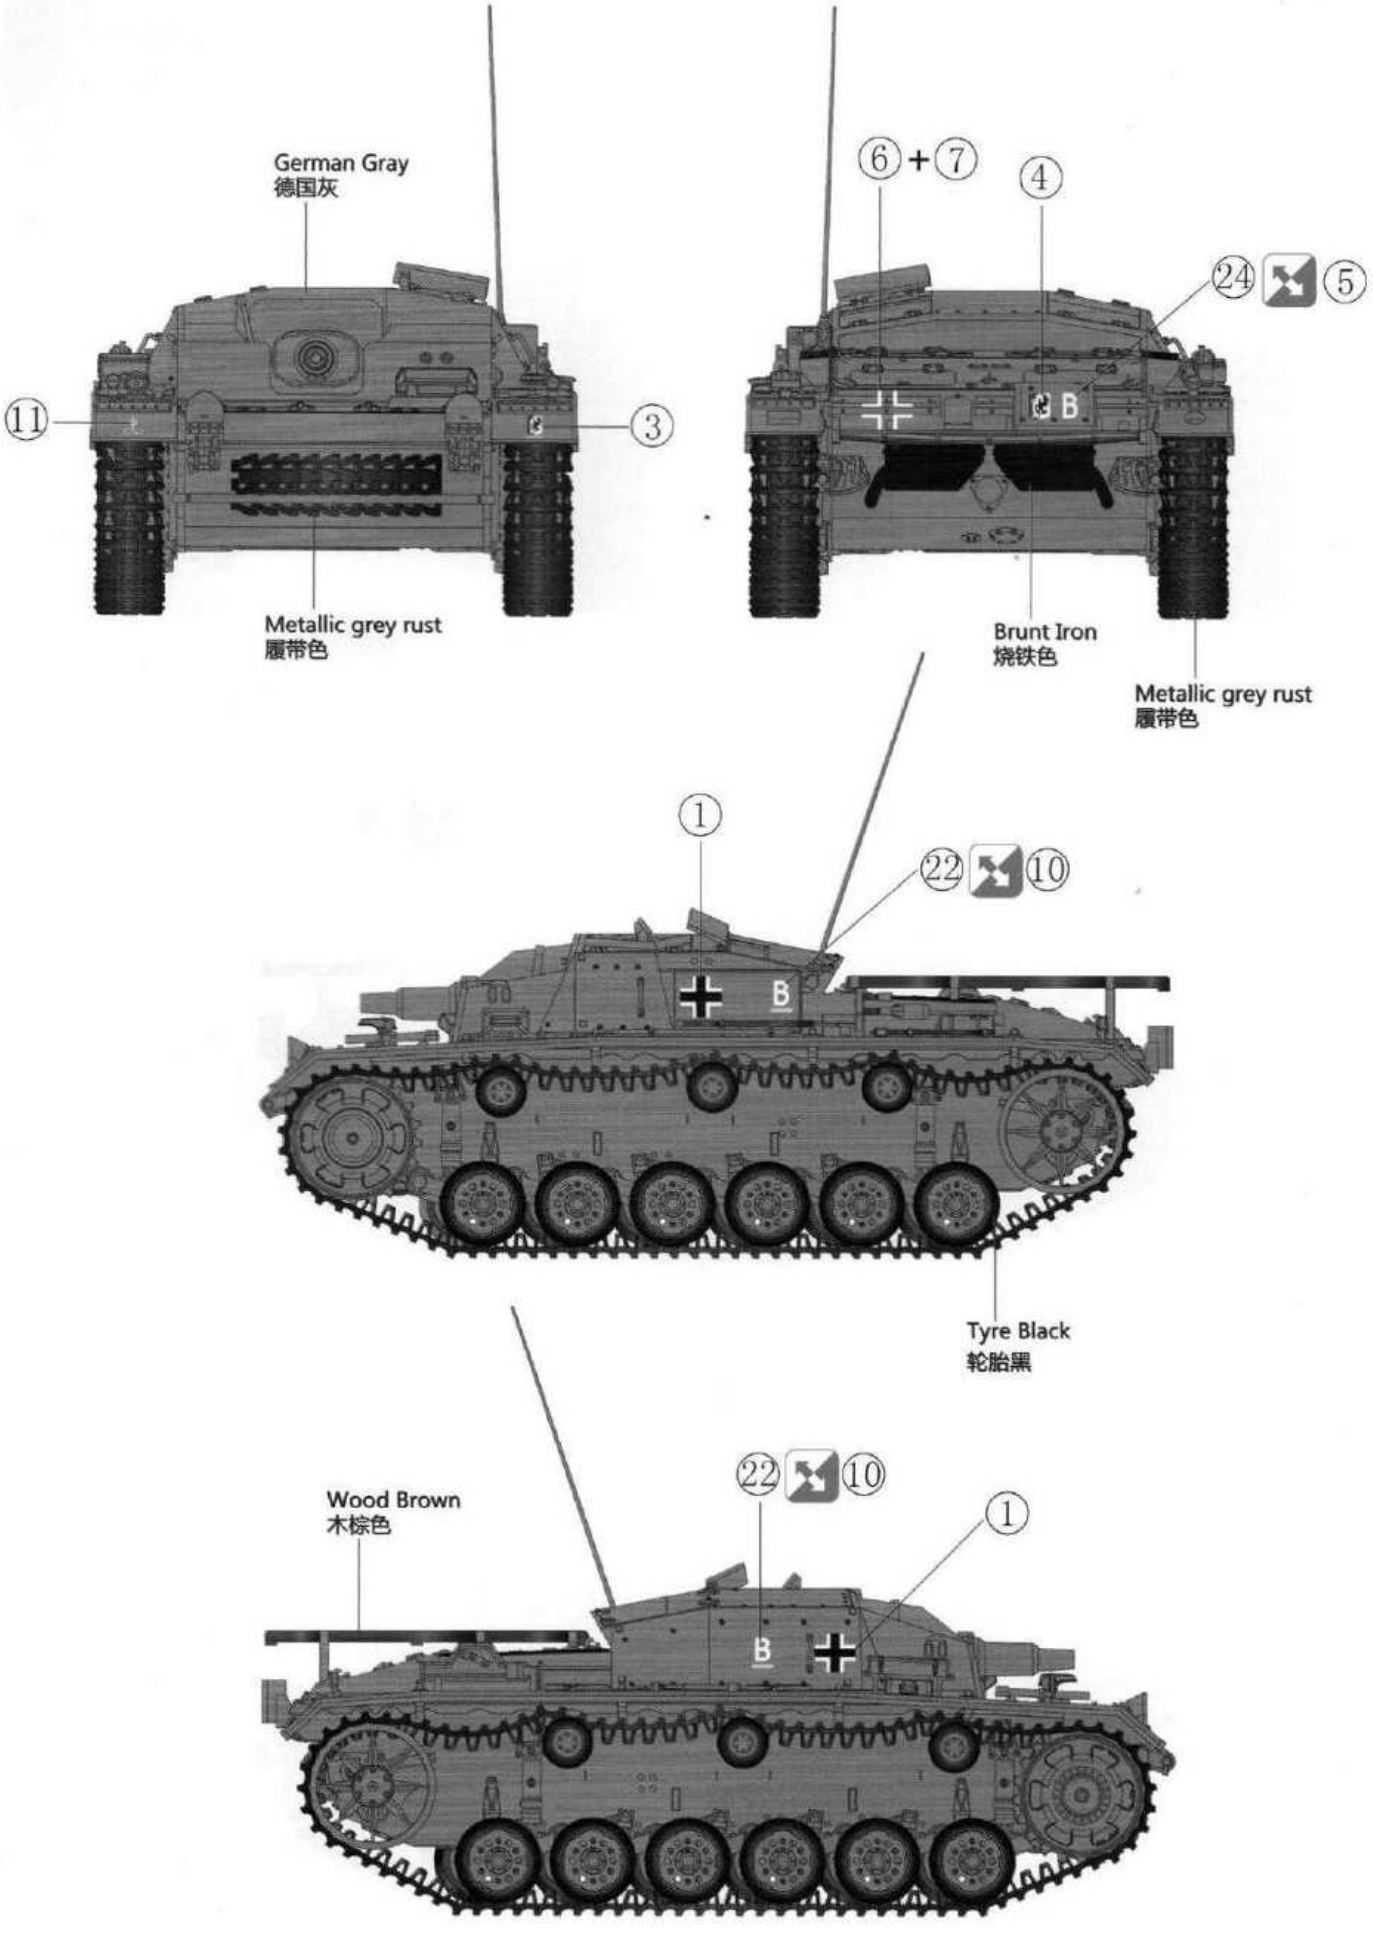


威骏模型 Copyright©2016 *All right reserved by Bronco Models

DECAL&COLOUR GUIDE 水贴及涂色指示：

Option3:WWII German StuG III Ausf D.StuG Abt 192. Russia. 1941

二战德国第192突击炮营俄国战场,1941年

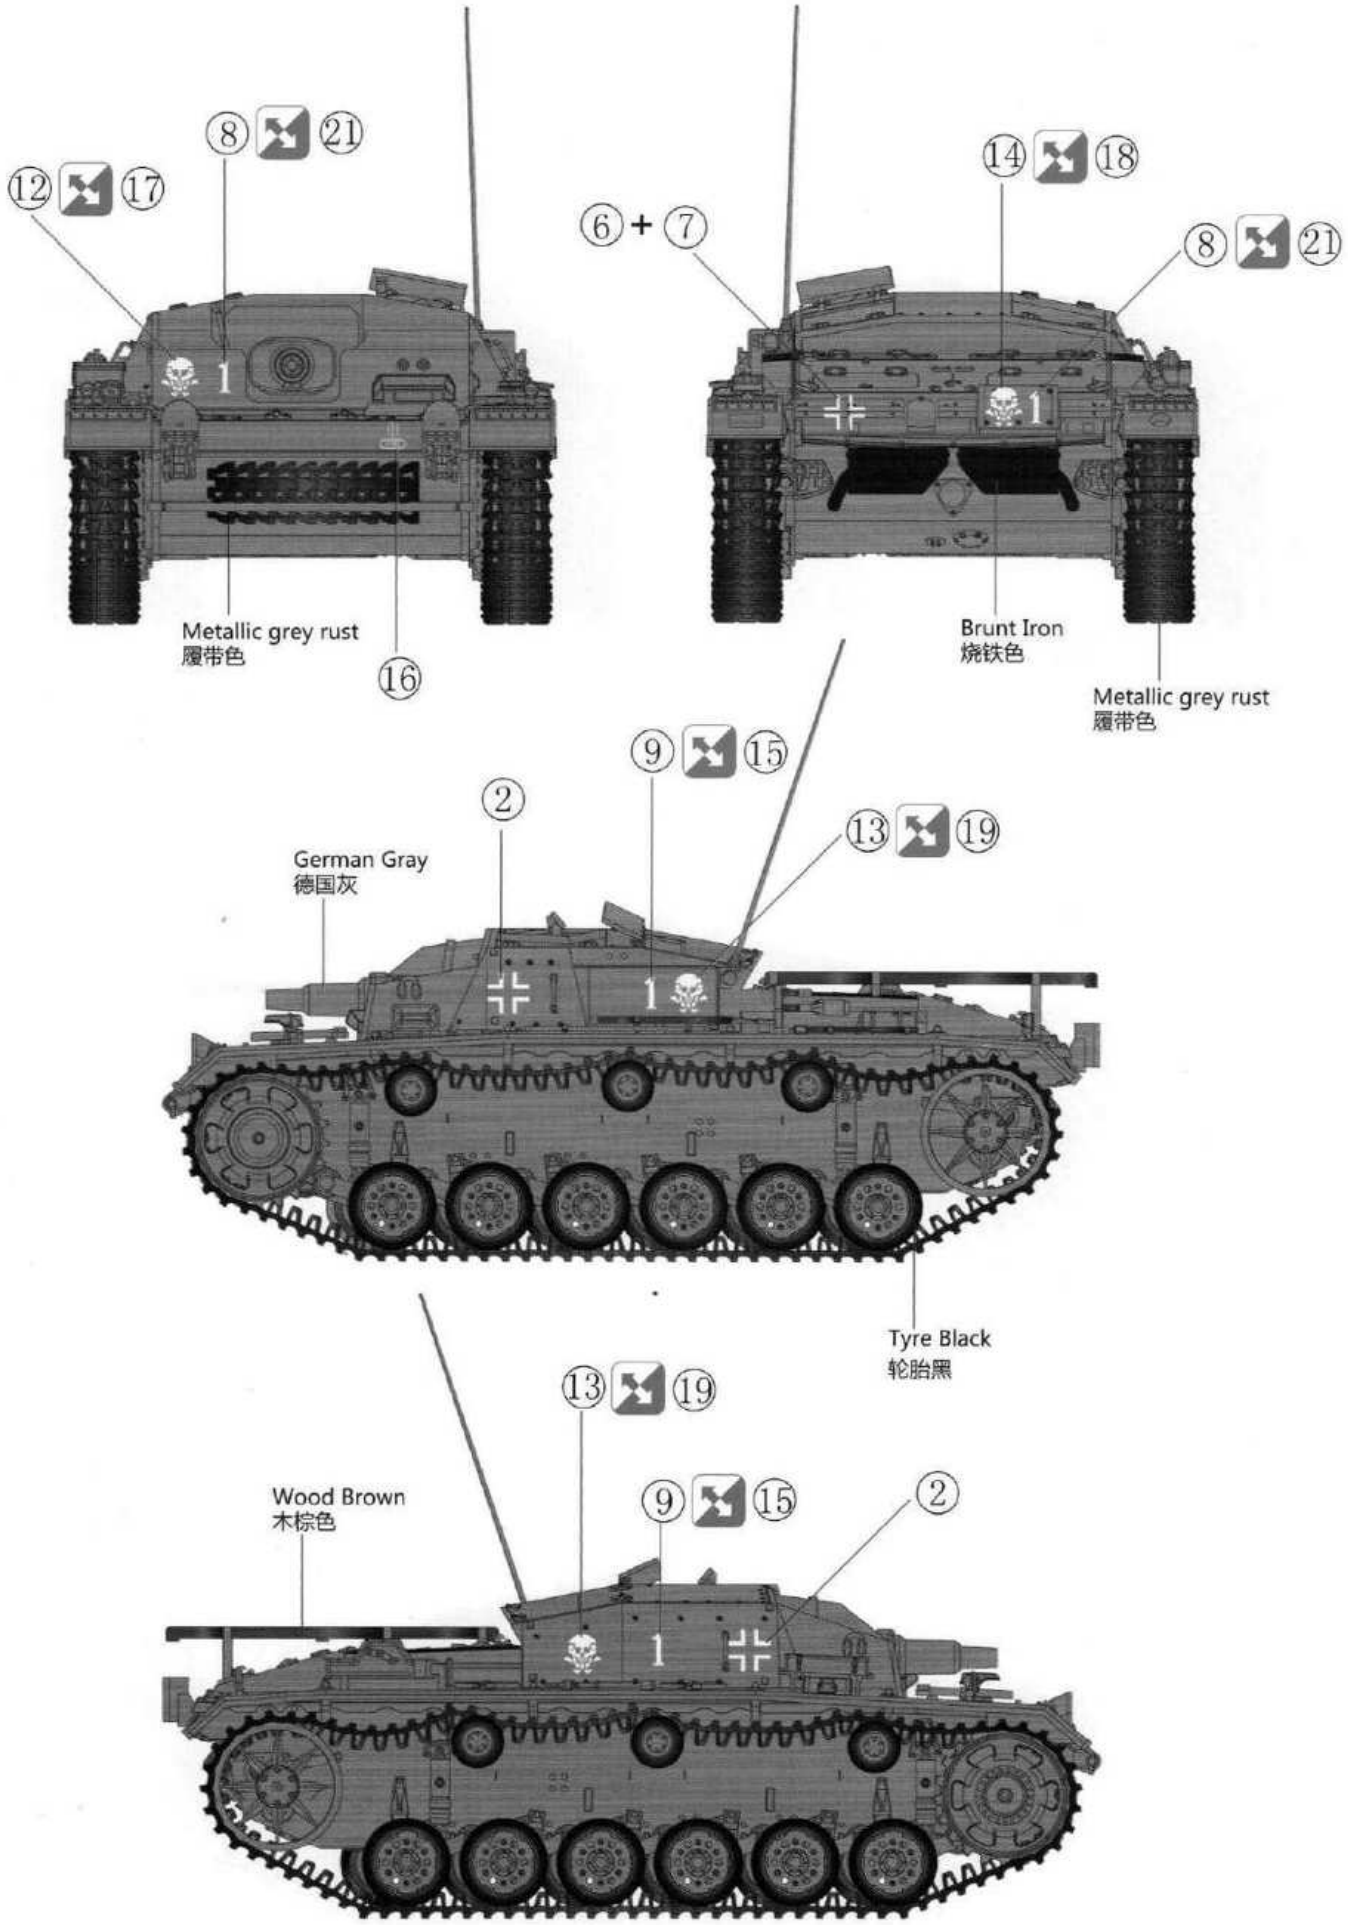

威骏模型 Copyright©2016 'All right reserved by Bronco Models